


# SUPER ●<sup>®</sup>

## SC748 Chassis Series

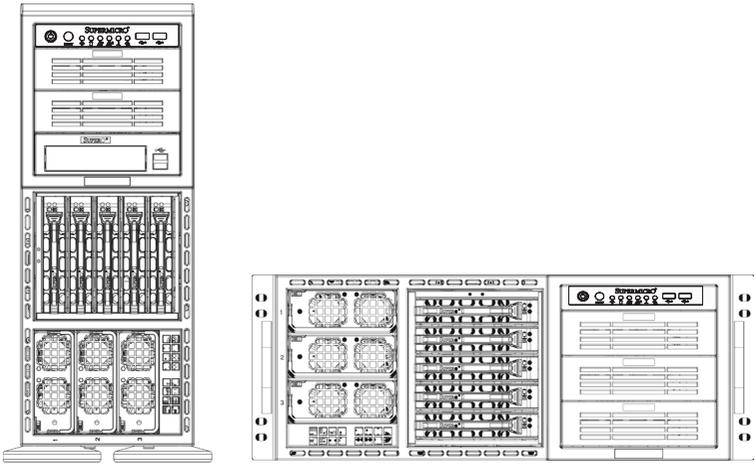

SC748TQ-R1000(B)

SC748TQ-R1200(B)

SC748S-R1000(B)

## USER'S MANUAL

1.0

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. **Please Note: For the most up-to-date version of this manual, please see our web site at [www.supermicro.com](http://www.supermicro.com).**

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software, if any, and documentation may not, in whole or in part, be copied, photocopied, reproduced, translated or reduced to any medium or machine without prior written consent.

IN NO EVENT WILL SUPERMICRO BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPERMICRO SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Super Micro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)"

---

**WARNING: Handling of lead solder materials used in this product may expose you to lead, a chemical known to the State of California to cause birth defects and other reproductive harm.**

---

Manual Revision 1.0

Release Date: September 11, 2008

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document.

Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2008 by Super Micro Computer, Inc.  
All rights reserved.

**Printed in the United States of America**

---

## Preface

### About This Manual

This manual is written for professional system integrators and PC technicians. It provides information for the installation and use of the SC748 4U chassis. Installation and maintenance should be performed by experienced technicians only.

Supermicro's SC748 4U chassis features a unique and highly-optimized design for dual-core Xeon platforms. The chassis is equipped with a redundant 1000 or 12000 Watt high-efficiency power supply for superb power savings. 3 hot-swappable high-performance fans provide ample optimized cooling for the chassis and 5 hot-swap drive bays and 3 peripheral drive bays offer maximum storage capacity in a 4U form factor.

This document lists compatible parts available when this document was published. Always refer to the our Web site for updates on supported parts and configurations.

## **Manual Organization**

### **Chapter 1: Introduction**

The first chapter provides a checklist of the main components included with this chassis and describes the main features of the SC748 chassis. This chapter also includes contact information.

### **Chapter 2: System Safety**

This chapter lists warnings, precautions, and system safety. You should thoroughly familiarize yourself with this chapter for a general overview of safety precautions that should be followed before installing and servicing this chassis.

### **Chapter 3: Chassis Components**

Refer here for details on this chassis model including the fans, bays, airflow shields, and other components.

### **Chapter 4: System Interface**

Refer to this chapter for details on the system interface, which includes the functions and information provided by the control panel on the chassis as well as other LEDs located throughout the system.

### **Chapter 5: Chassis Setup and Maintenance**

Refer to this chapter for detailed information on this chassis. You should follow the procedures given in this chapter when installing, removing, or reconfiguring your chassis.

### **Chapter 6: Rack Installation**

Refer to this chapter for detailed information on chassis rack installation. You should follow the procedures given in this chapter when installing, removing or reconfiguring your chassis into a rack environment.

## **Compatible Backplanes**

This section lists compatible cables, power supply specifications, and compatible backplanes. Not all compatible backplanes are listed. Refer to our Web site for the latest compatible backplane information.

### **Appendix A: Chassis Cables**

### **Appendix B: Power Supply Specifications**

### **Appendix C: MT35TQ Mobile Rack Specifications**

### **Appendix D: MT35S and MT35T Mobile Rack Specifications**

## Table of Contents

About This Manual .....	iii
Manual Organization .....	iv
<b>Chapter 1: Introduction</b>	
1-1 Overview .....	1
1-2 Shipping List.....	1
1-3 Chassis Features .....	2
CPU.....	2
Hard Drives .....	2
Mobile Rack .....	2
I/O Expansion slots .....	2
Peripheral Drives.....	2
Other Features .....	2
1-4 Contacting Supermicro.....	3
1-5 Returning Merchandise for Service.....	4
<b>Chapter 2 System Safety</b>	
2-1 Overview .....	1
2-2 Warnings and Precautions .....	1
2-3 Preparing for Setup.....	1
2-4 Electrical Safety Precautions .....	2
2-5 General Safety Precautions .....	3
2-6 System Safety .....	3
<b>Chapter 3 Chassis Components</b>	
3-1 Overview .....	1
3-2 Components.....	1
Mobile Rack .....	1
Fans .....	1
Mounting Rails (optional) .....	2
Power Supply.....	2
Air Shroud .....	2
3-3 Where to get Replacement Components.....	2
<b>Chapter 4 System Interface</b>	
4-1 Overview .....	1
4-2 Control Panel Buttons .....	2
4-3 Control Panel LEDs .....	2
4-4 Drive Carrier LEDs.....	3
SAS/SATA Drives .....	3

---

SCSI Drives.....	4
<b>Chapter 5 Chassis Setup and Maintenance</b>	
5-1 Overview .....	1
5-2 Installation Procedures.....	1
General Maintenance.....	1
5-3 Removing the Chassis Cover .....	2
5-4 Configuring the Storage Module .....	3
Tower or Rack Configuration.....	3
Adding Drives to the Storage Module.....	5
Adding Five Hard Drives to a Supermicro Mobile Rack:.....	10
5-5 Installing Hard Drives.....	12
Installing Hard Drives in the Chassis.....	12
5-6 Installing the Motherboard .....	14
I/O Slot Shield .....	14
Permanent and Optional Standoffs.....	15
Motherboard Installation.....	16
Power Supply Connections.....	17
Add-on Card/Expansion Slot Setup .....	18
5-7 Installing the Air Shroud.....	20
Checking the Server's Air Flow.....	21
Installation Complete.....	21
5-8 System Fans .....	22
Replacing a Front Chassis Fan .....	22
Replacing a Rear Chassis Fan.....	23
5-9 Power Supply .....	24
Power Supply Failure.....	24
<b>Chapter 6 Rack Installation</b>	
6-1 Overview .....	1
6-2 Unpacking the System.....	1
6-3 Preparing for Setup.....	1
Choosing a Setup Location.....	1
General Server Precautions.....	2
Rack Mounting Considerations.....	3
Ambient Operating Temperature .....	3
Reduced Airflow .....	3
Mechanical Loading .....	3
Circuit Overloading.....	3
Reliable Ground .....	3

---

6-4	Rack Mounting Instructions.....	4
	Removing the Chassis Cover and Feet.....	4
	Identifying the Sections of the Rack Rails.....	6
6-5	Tower Mounting Instructions.....	11

***Appendix A SC748 Chassis Cables***

***Appendix B SC748 Power Supply Specifications***

***Appendix C CSE-M35TQ Mobile Rack Specifications***

***Appendix DCSE-M35S/CSE-M35T1 Backplane Specifications***

# Chapter 1

## Introduction

### 1-1 Overview

Supermicro's SC748 4U chassis features a unique and highly-optimized design. The chassis is equipped with high efficiency power supply. High performance fans provide ample optimized cooling for FB-DIMM memory modules, 5 hot-swap drive bays and 3 peripheral drive bays offer maximum storage capacity in a 4U form factor.

### 1-2 Shipping List

#### Part Numbers

Please visit the following link for the latest shipping lists and part numbers for your particular chassis model <http://www.supermicro.com/products/chassis/4U/?chs=745>

SC748 Chassis				
Model	CPU	HDD	I/O Slots	Power Supply
SC748TQ-R1200(B)	DP Dual-core Xeon	5x SAS/ SATA	7x FF	1200W (Redundant)
SC748TQ-R1000(B)	DP Dual-core Xeon	5x SAS/ SATA	7x FF	1000W (Redundant)
SC748S-R1000 (B)	DP Dual-core Xeon	5x U320 SCSI	7x FF	1000W (Redundant)

## 1-3 Chassis Features

The SC748 4U high-performance chassis includes the following features:

### **CPU**

The SC748 Chassis supports a DP Dual-core Xeon processor. Please refer to the motherboard specifications pages on our web site for updates on supported processors.

### **Hard Drives**

The SC748 Chassis features five slots for U320 SCSI or SAS/SATA drives. These drives are hot swappable. Once setup correctly, these drives can be removed without powering down the server. In addition, these drives support SAF-TE (SCSI) and SES2 (SAS/SATA).

### **Mobile Rack**

The SC748 chassis includes either a CSE-M35TQ or CSE-M35S mobile rack. For detailed specific to your mobile rack, information, see the appendices at the back of this manual.

### **I/O Expansion slots**

Each version of the SC748 Chassis includes seven full I/O expansion slots.

### **Peripheral Drives**

Each SC748 Chassis provides three 5.25" Peripheral Drive Bays for DVD-ROM/CD-ROM drives, or additional hard drives. One of these drive bays may be used for a slim floppy drive.

### **Other Features**

Other onboard features are included to promote system health. These include three hot-swappable cooling fans, a convenient power switch, reset button, six LED indicators and two front USB ports.

## 1-4 Contacting Supermicro

### Headquarters

Address: Super Micro Computer, Inc.  
980 Rock Ave.  
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: [marketing@supermicro.com](mailto:marketing@supermicro.com) (General Information)  
[support@supermicro.com](mailto:support@supermicro.com) (Technical Support)

Web Site: [www.supermicro.com](http://www.supermicro.com)

### Europe

Address: Super Micro Computer B.V.  
Het Sterrenbeeld 28, 5215 ML  
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Email: [sales@supermicro.nl](mailto:sales@supermicro.nl) (General Information)  
[support@supermicro.nl](mailto:support@supermicro.nl) (Technical Support)  
[rma@supermicro.nl](mailto:rma@supermicro.nl) (Customer Support)

### Asia-Pacific

Address: Super Micro Computer, Inc.  
4F, No. 232-1, Liancheng Rd.  
Chung-Ho 235, Taipei County  
Taiwan, R.O.C.

Tel: +886-(2) 8226-3990

Fax: +886-(2) 8226-3991

Web Site: [www.supermicro.com.tw](http://www.supermicro.com.tw)

Technical Support:

Email: [support@supermicro.com.tw](mailto:support@supermicro.com.tw)

Tel: 886-2-8226-1900

## 1-5 Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations may be requested online (<http://www.supermicro.com/support/rma/>).

Whenever possible, repack the chassis in the original Supermicro carton, using the original packaging material. If these are no longer available, be sure to pack the chassis securely, using packaging material to surround the chassis so that it does not shift within the carton and become damaged during shipping.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alteration, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

## Chapter 2

# System Safety

### 2-1 Overview

This chapter provides a quick setup checklist to get your chassis up and running. Following the steps in order given should enable you to have your chassis setup and operational within a minimal amount of time. This quick set up assumes that you are an experienced technician, familiar with common concepts and terminology.

### 2-2 Warnings and Precautions

You should inspect the box the chassis was shipped in and note if it was damaged in any way. If the chassis itself shows damage, file a damage claim with carrier who delivered your system.

Decide on a suitable location for the rack unit that will hold that chassis. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated.

You will also need it placed near at least one grounded power outlet. When configured, the SC748 chassis includes one power supply. "R" models (i.e. SC748S-R650V Chassis) include a redundant power supply and require two grounded outlets.

### 2-3 Preparing for Setup

The SC748 Chassis includes a set of rail assemblies, including mounting brackets and mounting screws you will need to install the systems into the rack. Please read this manual in its entirety before you begin the installation procedure.

## 2-4 Electrical Safety Precautions

Basic electrical safety precautions should be followed to protect yourself from harm and the SC748 from damage:

- Be aware of the locations of the power on/off switch on the chassis as well as the room's emergency power-off switch, disconnection switch or electrical outlet. If an electrical accident occurs, you can then quickly remove power from the system.
- Do not work alone when working with high voltage components.
- Power should always be disconnected from the system when removing or installing main system components, such as the serverboard, memory modules and the DVD-ROM and floppy drives (not necessary for hot swappable drives). When disconnecting power, you should first power down the system with the operating system and then unplug the power cords from all the power supply modules in the system.
- When working around exposed electrical circuits, another person who is familiar with the power-off controls should be nearby to switch off the power, if necessary.
- Use only one hand when working with powered-on electrical equipment. This is to avoid making a complete circuit, which will cause electrical shock. Use extreme caution when using metal tools, which can easily damage any electrical components or circuit boards they come into contact with.
- Do not use mats designed to decrease electrostatic discharge as protection from electrical shock. Instead, use rubber mats that have been specifically designed as electrical insulators.
- The power supply power cord must include a grounding plug and must be plugged into grounded electrical outlets.
- Serverboard Battery: CAUTION - There is a danger of explosion if the onboard battery is installed upside down, which will reverse its polarities This battery must be replaced only with the same or an equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.
- DVD-ROM Laser: CAUTION - this server may have come equipped with a DVD-ROM drive. To prevent direct exposure to the laser beam and hazardous

radiation exposure, do not open the enclosure or use the unit in any unconventional way.

## 2-5 General Safety Precautions

- Keep the area around the chassis clean and free of clutter.
- Place the chassis top cover and any system components that have been removed away from the system or on a table so that they won't accidentally be stepped on.
- While working on the system, do not wear loose clothing such as neckties and unbuttoned shirt sleeves, which can come into contact with electrical circuits or be pulled into a cooling fan.
- Remove any jewelry or metal objects from your body, which are excellent metal conductors that can create short circuits and harm you if they come into contact with printed circuit boards or areas where power is present.
- After accessing the inside of the system, close the system back up and secure it to the rack unit with the retention screws after ensuring that all connections have been made.

## 2-6 System Safety

Electrostatic discharge (ESD) is generated by two objects with different electrical charges coming into contact with each other. An electrical discharge is created to neutralize this difference, which can damage electronic components and printed circuit boards. The following measures are generally sufficient to neutralize this difference before contact is made to protect your equipment from ESD:

- Do not use mats designed to decrease electrostatic discharge as protection from electrical shock. Instead, use rubber mats that have been specifically designed as electrical insulators.
- Use a grounded wrist strap designed to prevent static discharge.
- Keep all components and printed circuit boards (PCBs) in their antistatic bags until ready for use.
- Touch a grounded metal object before removing any board from its antistatic bag.

- Do not let components or PCBs come into contact with your clothing, which may retain a charge even if you are wearing a wrist strap.
- Handle a board by its edges only; do not touch its components, peripheral chips, memory modules or contacts.
- When handling chips or modules, avoid touching their pins.
- Put the serverboard and peripherals back into their antistatic bags when not in use.
- For grounding purposes, make sure your computer chassis provides excellent conductivity between the power supply, the case, the mounting fasteners and the serverboard.

## Chapter 3

# Chassis Components

### 3-1 Overview

This chapter describes the most common components included with your chassis. Some components listed may not be included or compatible with your particular chassis model. For more information, see the installation instructions detailed later in this manual.

### 3-2 Components

#### Chassis

The SC748 chassis includes any the following:

- Five 3.5" hot-swappable drive bays.
- Three 5.25" peripheral drive bays
- Seven add-on/expansion card slots.

For the latest shipping lists, visit our Web site at: <http://www.supermicro.com>.

This chassis accepts three hot-swappable system cooling fans and two power supplies. SC748 chassis come in beige or black. Drive bays may be used for up to three 5.25" peripheral drives, or two 5.25" peripheral drives with one floppy disc drive.

#### Mobile Rack

Each SC748 chassis comes with either a M35S or M35TQ mobile rack. For more information the mobile rack in your system, view the appendices found at the end of this manual. In addition, visit our Web site for the latest information: <http://www.supermicro.com>.

## **Fans**

The SC748 chassis accepts three system fans and two rear exhaust fans. System fans for SC748 chassis are powered from the serverboard. These fans are 4U high and are powered by 3-pin connectors.

## **Mounting Rails (optional)**

The SC748 can be placed in a rack for secure storage and use. To setup your rack, follow the step-by-step instructions included in this manual.

## **Power Supply**

Each SC748 chassis model includes a high-efficiency 80%+ low noise power supply with thermal control fan, rated at 200 Watts. In the unlikely event your power supply fails, replacement is simple and can be done without tools.

## **Air Shroud**

Air shrouds are shields, usually plastic, that conduct air directly to where it is needed. Always use the air shroud included with your chassis.

### **3-3 Where to get Replacement Components**

Though not frequently, you may need replacement parts for your system. To ensure the highest level of professional service and technical support, we strongly recommend purchasing exclusively from our Supermicro Authorized Distributors / System Integrators / Resellers. A list of Supermicro Authorized Distributors / System Integrators / Reseller can be found at: <http://www.supermicro.com>. Click the Where to Buy link.

# Chapter 4

## System Interface

### 4-1 Overview

There are several LEDs on the control panel as well as others on the drive carriers to keep you constantly informed of the overall status of the system as well as the activity and health of specific components. Most SC748 models have two buttons on the chassis a control panel; a reset button and an on/off switch. This chapter explains the meanings of all LED indicators and the appropriate responses you may need to take.

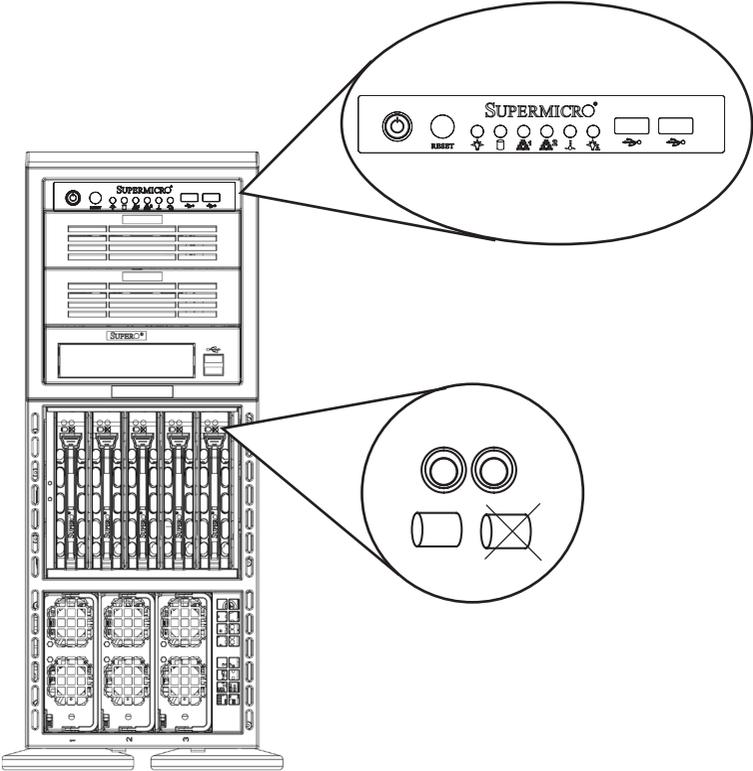


Figure 4-1: Front LEDs

## 4-2 Control Panel Buttons

There are two push-buttons located on the front of the chassis. These are power on/off button and a reset button.



- **Power:** The main power switch is used to apply or remove power from the power supply to the server system. Turning off system power with this button removes the main power but keeps standby power supplied to the system. Therefore, you must unplug system before servicing.



- **Reset:** The reset button is used to reboot the system.

## 4-3 Control Panel LEDs

The control panel located on the front of the SC748 chassis has six LEDs. These LEDs provide you with critical information related to different parts of the system. This section explains what each LED indicates when illuminated and any corrective action you may need to take.



- **Power:** Indicates power is being supplied to the system's power supply units. This LED should normally be illuminated when the system is operating.



**Overheat/Fan Fail:** When this LED flashes it indicates a fan failure. When continuously on (not flashing) it indicates an overheat condition, which may be caused by cables obstructing the airflow in the system or the ambient room temperature being too warm. Check the routing of the cables and make sure all fans are present and operating normally. You should also check to make sure that the chassis covers are installed. Finally, verify that the heatsinks are installed properly. This LED will remain flashing or on as long as the overheat condition exists.



- **HDD:** Indicates IDE channel activity. SAS/SATA drive, SCSI drive, and/or DVD-ROM drive activity when flashing.



- **NIC2:** Indicates network activity on GLAN2 when flashing.



- **NIC1:** Indicates network activity on GLAN1 when flashing.



- **Power Fail:** Indicates a power failure to the system's power supply units.

## 4-4 Drive Carrier LEDs

Your chassis uses SAS/SATA or SCSI drives, but not both.

### SAS/SATA Drives

Each SAS/SATA drive carrier has two LEDs.

- **Green:** Each Serial ATA drive carrier has a green LED. When illuminated, this green LED (on the front of the SATA drive carrier) indicates drive activity. A connection to the SATA backplane enables this LED to blink on and off when that particular drive is being accessed.
- **Red:** The red LED to indicate an SAS/SATA drive failure. If one of the SAS/SATA drives fail, you should be notified by your system management software.

## SCSI Drives

Each SCSI drive carrier has two LEDs.

- **Green:** When illuminated, the green LED on the front of the SCSI drive carrier indicates drive activity. A connection to the SCSI SCA backplane enables this LED to blink on and off when that particular drive is being accessed.
- **Red:** The SAF-TE compliant backplane activates the red LED to indicate a drive failure. If one of the SCSI drives fail, you should be notified by your system management software.

## Chapter 5

# Chassis Setup and Maintenance

### 5-1 Overview

This chapter covers the steps required to install components and perform maintenance on the chassis. The only tool you will need to install components and perform maintenance is a Phillips screwdriver. Print this page to use as a reference while setting up your chassis.

### 5-2 Installation Procedures

- Removing the Chassis Cover and Front Cover
- Configuring the Storage Module
- Installing Hard Drives
- Installing the Motherboard
- Installing the Air Shroud and Checking the Airflow

#### General Maintenance

- General Maintenance: Systems Fans
- General Maintenance: Power Supply



**Warning:** Except for short periods of time, do NOT operate the server without the cover in place. The chassis cover must be in place to allow proper airflow and prevent overheating.



Review the warnings and precautions listed in the manual before setting up or servicing this chassis. These include information in Chapter 2: System Safety and the warnings/precautions listed in the setup instructions.

### 5-3 Removing the Chassis Cover

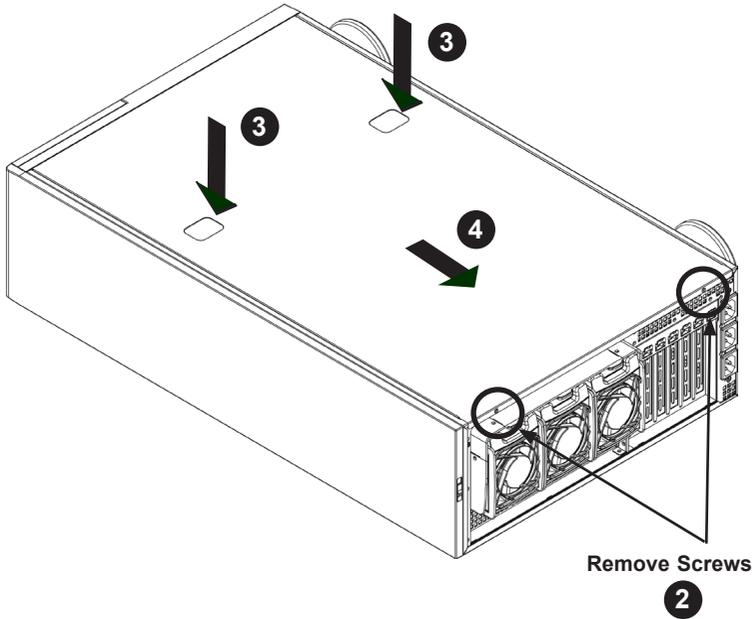


Figure 5-1: Removing the Chassis Cover

#### *Removing the Chassis Cover*

1. Unplug the chassis from any power source
2. Remove the two screws securing the cover to the chassis.
3. Press the release tabs simultaneously.
4. Slide the cover forward.

## 5-4 Configuring the Storage Module

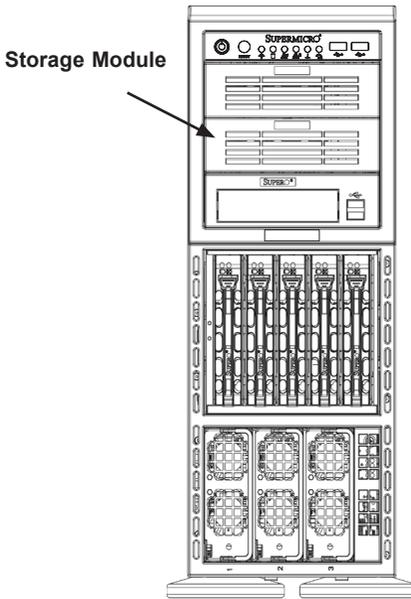


Figure 5-2: Chassis in Tower Mode


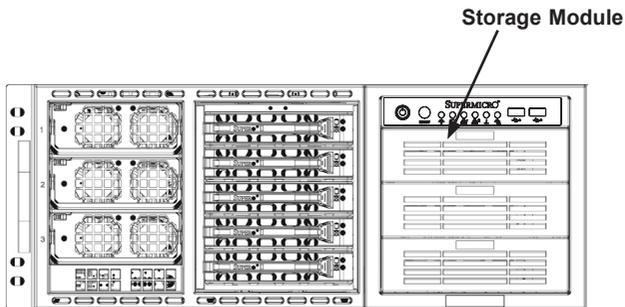


Figure 5-3: Chassis in Rack Mount Mode

### Tower or Rack Configuration


The SC748 chassis is shipped in tower mode and can be immediately used as desktop server. If the chassis is to be used in a rack, you must rotate the storage module 90 degrees. This can be done before, during, or after setup.

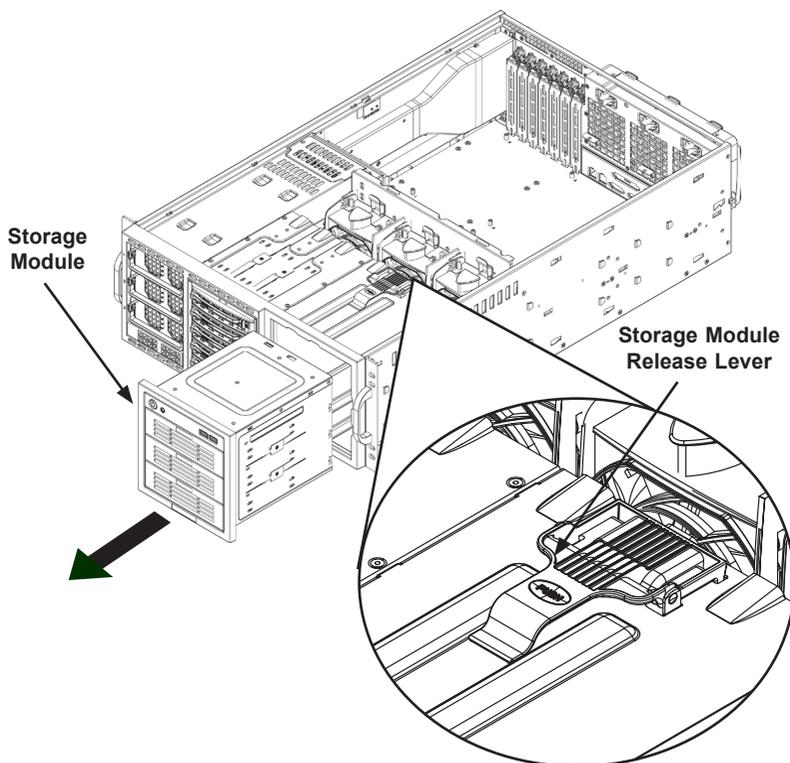

**Figure 5-4: Remove the Storage Module**

***Rotating the Storage Module for Rack Mounting***

1. Open the chassis cover.
2. Locate the storage module and disconnect any cables from the storage module to any component in the chassis.
3. Push the storage module release lever. This lever unlocks the storage module.
4. Grasp the external edges of the storage module and pull the unit from the chassis.
5. Rotate the storage module 90 degrees (as illustrated).
6. Reinsert the module into the chassis and reconnect the cords.

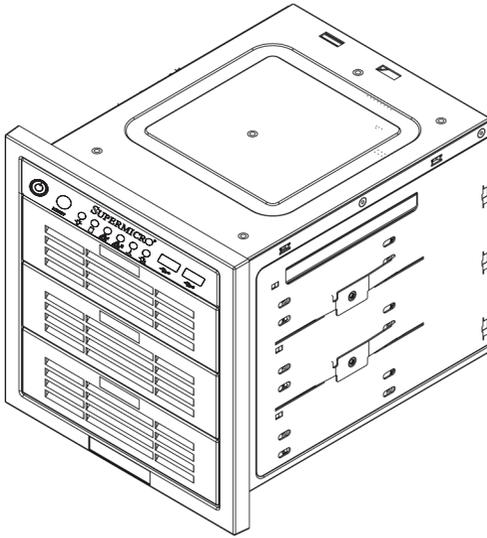

**Figure 5-5: Chassis Storage Module**


### **Adding Drives to the Storage Module**

The storage module includes three full sized drive bays and the front LED panel. The storage module can be set up in a variety of configurations: There are three basic configurations (see A, B, and C below) which can then be combined within the three bays to suit the user's needs.

(Example: 2 DVDs with 1 HDD or 1 DVD with 2 HDD etc.)

Basic Configurations:


- A. Add up to three extra hard drives to the drive trays.
- B. Add up to three peripheral drives (CD-ROM, DVD-ROM, floppy drive, etc.) to the drive trays.
- C. Add five hot swappable hard drives to the storage module. This configuration requires a CSE-M35S or CSE-M35TQ mobile rack. More information on mobile rack installation can be found in the appendices at the end of this manual.

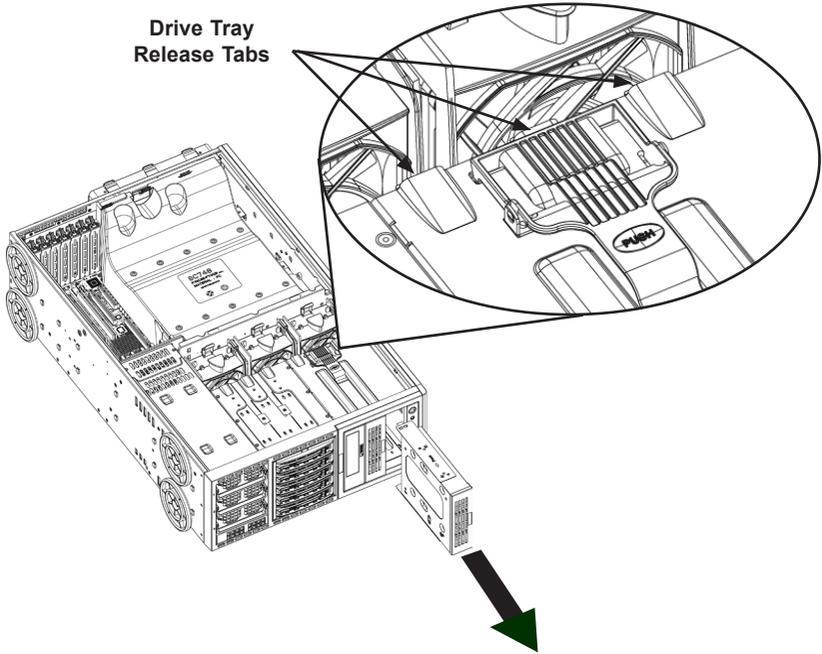

**Figure 5-6: Remove Drive Tray**


***Installing Hard Drives into the Drive Trays***

1. Open the chassis cover.
2. Locate the drive tray release tab for the slot you want to place the peripheral drive.
3. Push the drive tray toward the front of the chassis.

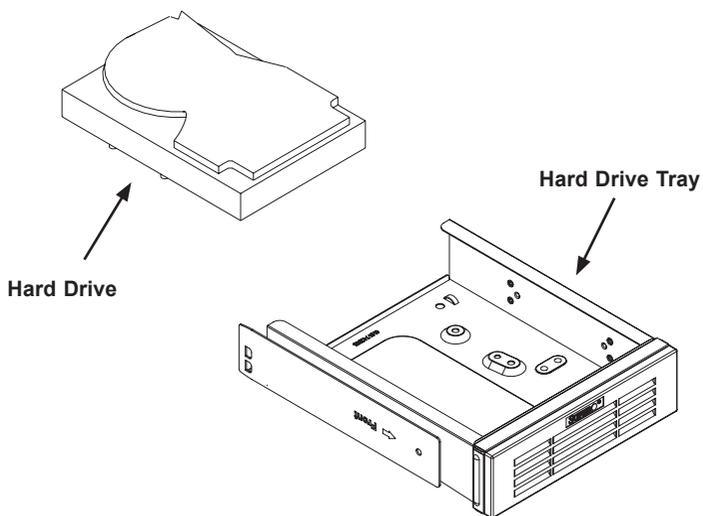

**Figure 5-7: Add a Hard Drive to the Drive Tray**


4. Place the hard drive to the hard drive tray. Make sure The hard drive can be SAS or SCSI depending on your motherboard. The hard drive may not completely fill the tray.
5. Secure the hard drive to the tray with four screws from the bottom.
6. Slide the hard drive into the chassis until the tray clicks into place.
7. Repeat these steps for each hard drive tray.

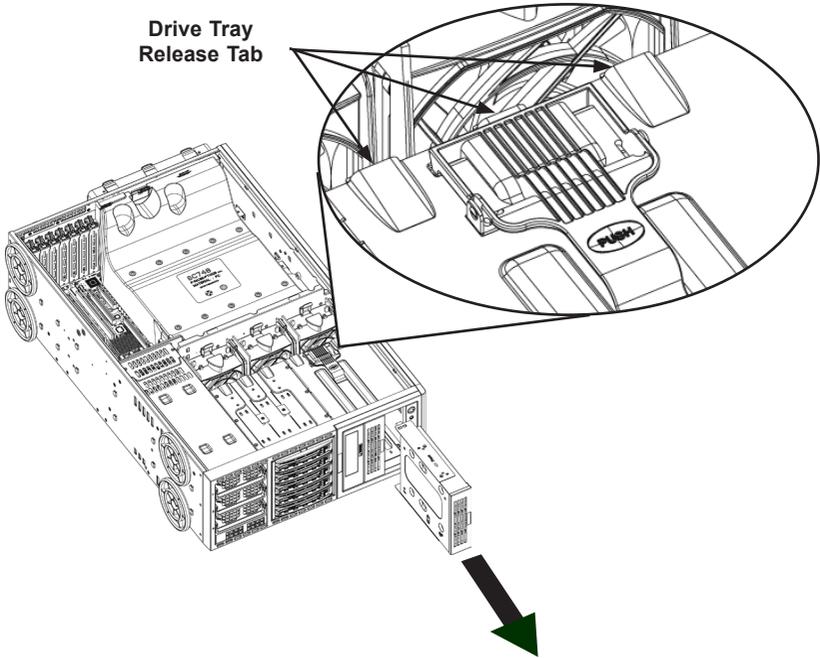

**Figure 5-8: Remove Drive Tray**


***Adding Peripheral Drives (DVD-ROM, CD-ROM, Floppy Drive, etc.) to the Drive Trays***

1. Open the chassis cover.
2. Locate the drive tray release tab for the slot you want to place the peripheral drive.
3. Push the drive tray toward the front of the chassis.

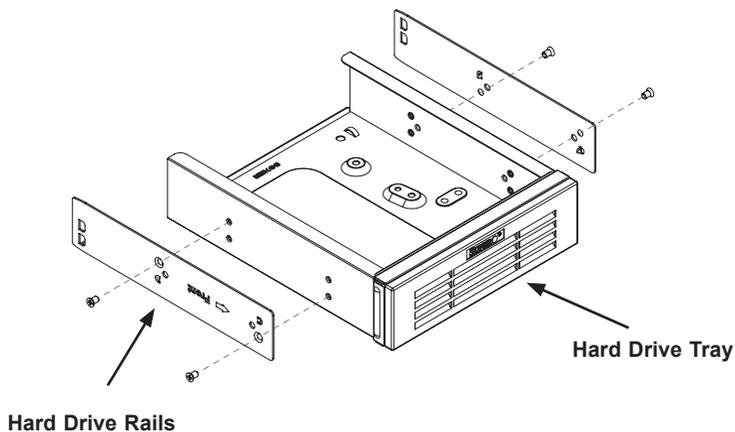

**Figure 5-9: Add Hard Drive Rails to the DVD-ROM Drive**

4. Remove the hard drive tray rails from the hard drive tray. To do this, you must remove two screws from each side.
5. Attach the rails to a DVD-ROM, CD-ROM, floppy drive, or other peripheral. The rails should fit any standard sized peripherals.
6. Slide the peripheral into the chassis until the tray clicks into place.
7. Repeat these steps for each hard drive tray.

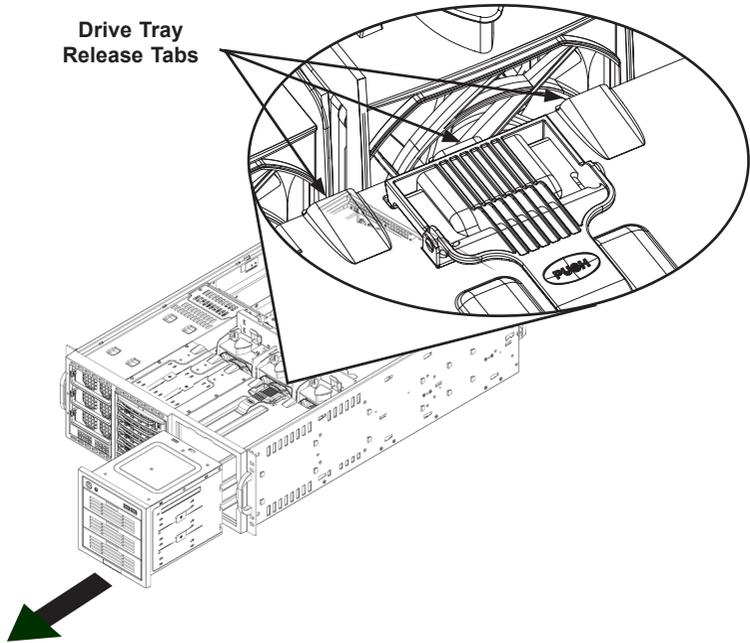

**Figure 5-10: Removing the Drive Bay**

### **Adding Five Hard Drives to a Supermicro Mobile Rack:**

The SC748 chassis accepts a CSE-M35S (SCSI) or CSE-M35T-1/CSE-M35TQ (SAS/SATA) mobile rack in order to install hot swappable hard drives. The mobile rack replaces the storage module in the chassis.

For more information on mobile rack installation and use, refer to the appendices located at the end of this manual.

#### ***Removing the Storage Module and Installing the M35 Mobile Rack***

1. Open the chassis cover.
2. Press the drive tray release tabs
3. Push the storage module forward and out of the chassis

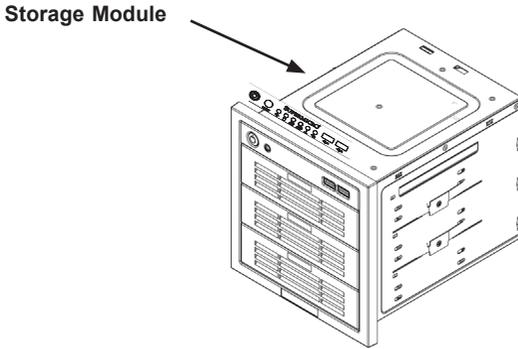


Figure 5-11: The Storage Module

4. Install all six storage module rails onto the mobile rack. Each rail requires two screws. Make sure the arrow on the rail points toward the front of the chassis.
5. Slide the mobile rack into the chassis.

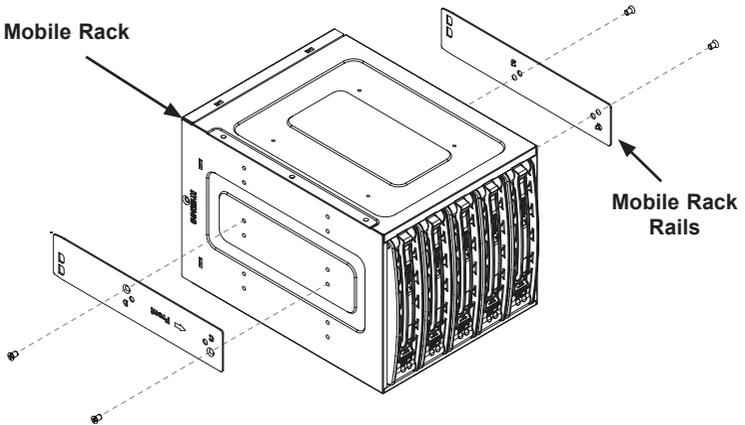


Figure 5-12: Add Storage Module Rails to the Mobile Rack

## 5-5 Installing Hard Drives

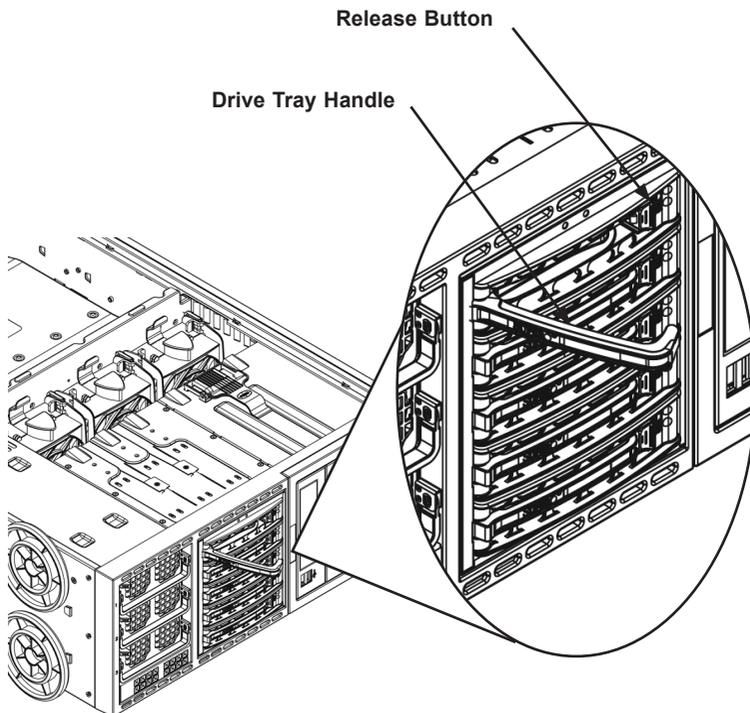



Figure 5-13: Install Hard Drives

### Installing Hard Drives in the Chassis

The drives are mounted in drive carriers to simplify their installation and removal from the chassis. These carriers also help promote proper airflow for the drive bays.


#### *Installing Hard Drives*

1. Press the release button to extend the drive tray handle.
2. Using the handle, pull the drive tray out by the handle. The drive is hot-swappable; there are no cables to disconnect.

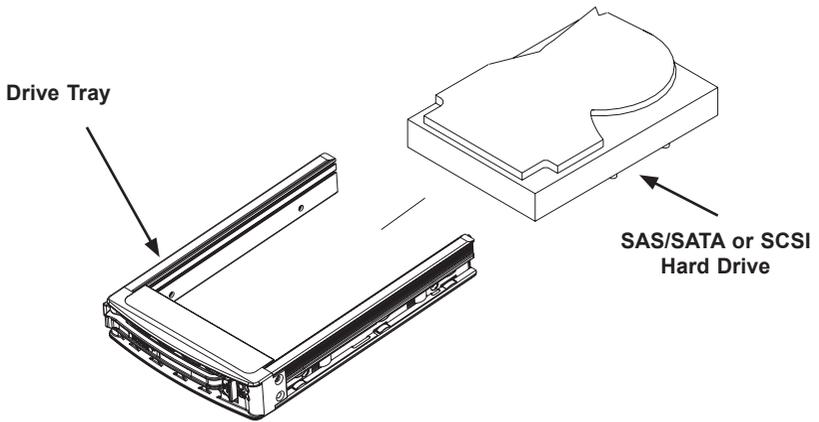

**Figure 5-14: Removing the Dummy Drive Tray**

3. Remove the screws holding the drive tray to the dummy drive.
4. Place a hard drive in the drive tray.

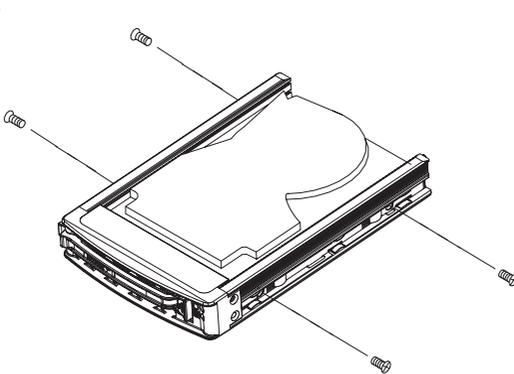

**Figure 5-15: Installing the Hard Drive**

5. Secure the hard drive to the tray using four screws.
6. Insert the hard drive into the chassis. To do this:
  - 7a. Press the hard drive release button to extend the drive tray handle.
  - 7b. Insert the hard drive into the chassis and close the handle to lock the hard drive into place.

## 5-6 Installing the Motherboard

### I/O Slot Shield

The I/O shield holds the motherboard ports in place. Install the I/O shield before you install the motherboard.

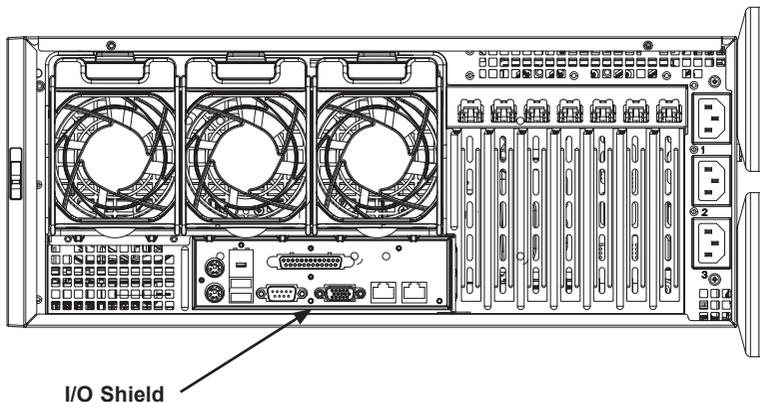



Figure 5-16: SC748 Chassis I/O Shield

### *Installing the I/O Shield*

1. Review the documentation that came with your motherboard. Become familiar with component placement, requirements, and precautions.
2. Open the chassis cover.
3. Choose the proper I/O shield for the motherboard you are installing.
4. With the illustrations facing the outside of the chassis, place the shield into the space provided. Once installed, the motherboard ports will hold the I/O shield in place.

## Permanent and Optional Standoffs

Standoffs prevent short circuits by securing space between the motherboard and the chassis surface. The SC748 chassis packaging includes optional standoffs (hexagon shaped posts). These standoffs accept the rounded Phillips head screws included in the SC748 accessories packaging.

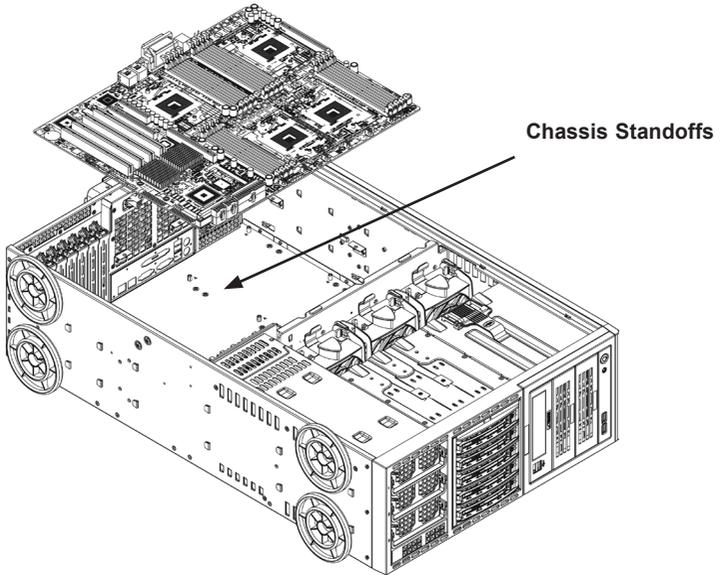


**Figure 5-17: Chassis Standoffs**

## Motherboard Installation

### *Installing the Motherboard:*

1. Review the documentation that came with your motherboard. Become familiar with component placement, requirements, and precautions.
2. Disconnect the power supply and lay the chassis on a flat surface.
3. Open the chassis cover.
4. As required by your motherboard, install standoffs in any areas that do not have a permanent standoff. To do this:
  - A. Place a hexagonal standoff screw through the bottom the chassis.
  - B. Secure the screw with the hexagon nut (rounded side up).
5. Lay the motherboard on the chassis aligning the permanent and optional standoffs.
6. Secure the motherboard to the chassis using the rounded, Phillips head screws.
7. Secure the CPU(s), heatsinks, and other components to the motherboard, chassis, and/or backplane as needed.

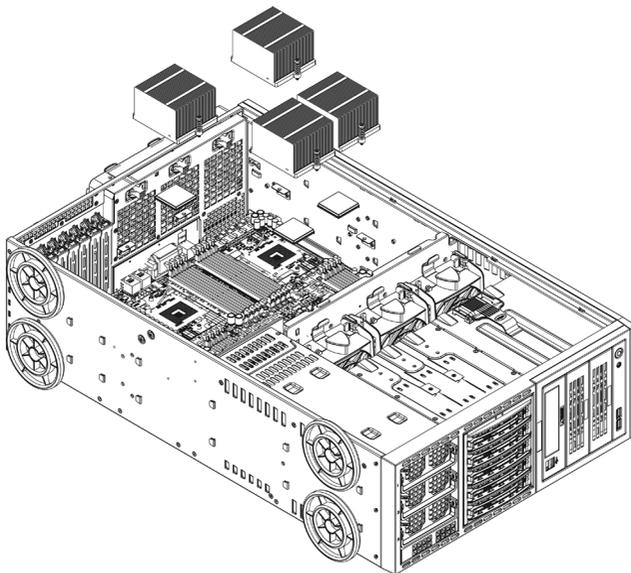


**Figure 5-18: Installing Heatsinks**

## Power Supply Connections

Connect each of the following cables, as required, by your motherboard manufacturer. In some instances, some cables may not need to be connected. Some cables may not be available with your model.

Power Supply Cable			
Name	Number	Connects to:	Description
20-pin or 24-pin power cable	1	Motherboard	20-pin or 24-pin power cable provides electricity to the motherboard. Has 20 - 24 yellow, black, gray, red, orange, green and blue wires.
Hard drive power cable	2	Backplane	Each cable has 3 connectors (two hard drive and one floppy drive). Attach the hard drive connectors to the backplane. <b>If you are using a Supermicro backplane, the floppy drive connector does not need to be attached.</b>
8-pin motherboard cable	1	Motherboard	Provides power to the motherboard CPU. This cable has 2 black and 2 yellow wires.
4-pin motherboard cable	1	Motherboard	Provides power to PCI expansion card. This cable has 2 black and 2 yellow wires.
5-pin SMBus power cable (small)	1	Motherboard	Allows the SM (System Management) bus to monitor power supply
2-pin INT cable	1	Motherboard	Intrusion detection cable allows the system to log when the server chassis has been opened.

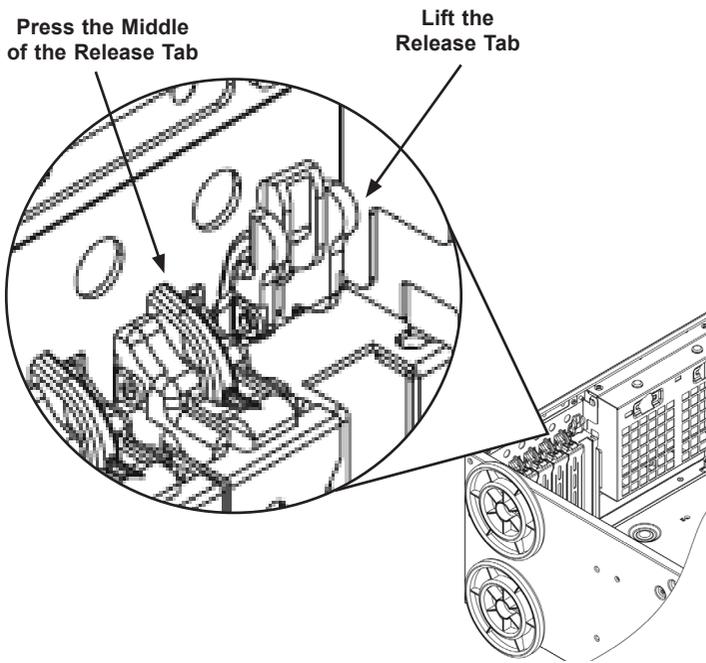


**Figure 5-19: Add-on Card/Expansion Card Port**

### **Add-on Card/Expansion Slot Setup**

After motherboard installation, install add-on cards to the chassis, such as PCI cards.

#### ***Installing Add-on and Expansion Cards***


1. Locate the release tab on the top of the PCI bracket.
2. Gently apply pressure in the middle of the release tab to unlock the PCI Slot bracket.
3. Pull the release tab upward.

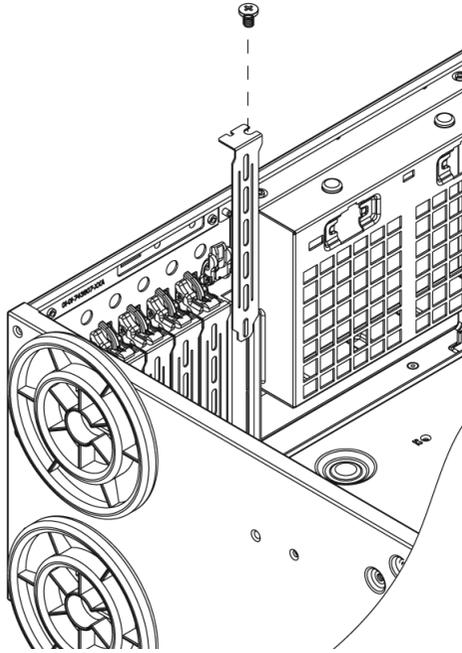


**Figure 5-20: Remove PCI Card Slot Guard**

4. Remove the screw holding the bracket in place and pull the bracket from the chassis.
5. Install your PCI card or other add-on card into the PCI slot bracket and motherboard. To do this, slide the PCI card (with "L" bracket) into the PCI slot and secure the card to the motherboard.
6. Push the PCI bracket release tab down until it locks into place with an audible "click".
7. Secure the PCI card with the screw previously removed from the chassis
8. Repeat this process with each PCI card you want to install into the chassis.

## 5-7 Installing the Air Shroud

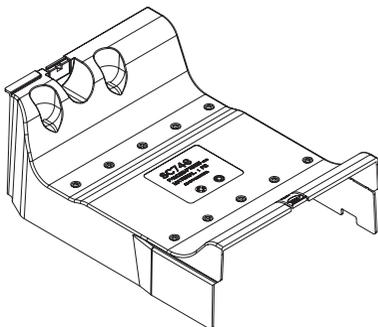

**Figure 5-21A: Intel  
CPU Air Shroud**

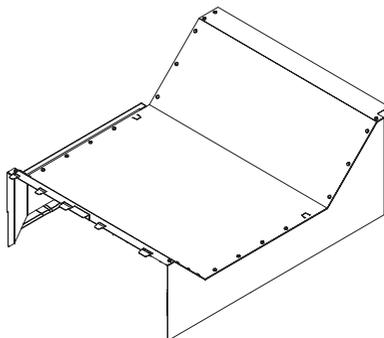

**Figure 5-21B: AMD  
CPU Air Shroud**

Air shrouds concentrate airflow to maximize fan efficiency. The SC748 chassis air shroud does not require screws to set it up.

The SC748 chassis supports two different air shroud designs, one for AMD CPUs and, and another for Intel CPUs.


**AMD CPU Users** - The air shroud for use with AMD CPUs includes tabs that can be removed if motherboard components prevent the air shroud from fitting securely. Remove tabs only if necessary.

**Intel CPU Users** - The air shroud for use with Intel CPUs does not require any additional modification.

### ***Installing the Air Shroud***

1. Remove the chassis cover.
2. Place air shroud in your chassis with the fan side touching the edge of the two fans closest to the power supply. The other side should cover both of the rear fans.
3. Replace the chassis cover.

**Air Shroud**

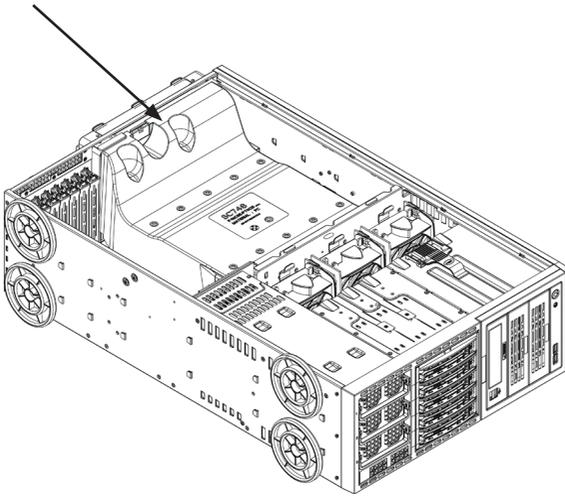

**Figure 5-22: Air Shroud in Place**

## Checking the Server's Air Flow

### *Check the Following*

1. Make sure there are no objects obstructing the airflow in and out of the server. In addition, if you are using a front bezel, make sure the bezel's filter is replaced periodically.
2. Do not operate the server without drives or drive trays in the drive bays. Use only recommended server parts.
3. Make sure no wires or foreign objects obstruct air flow through the chassis. Pull all excess cabling out of the airflow path or use shorter cables.

## Installation Complete

In most cases, the chassis power supply and fans are pre-installed. If you need to install fans continue to the Systems Fan section of this chapter. If the chassis will be installed into a rack, continue to the next chapter for rack installation instructions.

## 5-8 System Fans

Five heavy duty fans provide cooling for the chassis. Three fans are located in the front of the chassis and two fans are in the rear. These fans circulate air through the chassis as a means of lowering the internal temperature of the chassis.

The fans come pre-installed to the chassis. Each fan is hot-swappable and can be replaced without removing any connections.


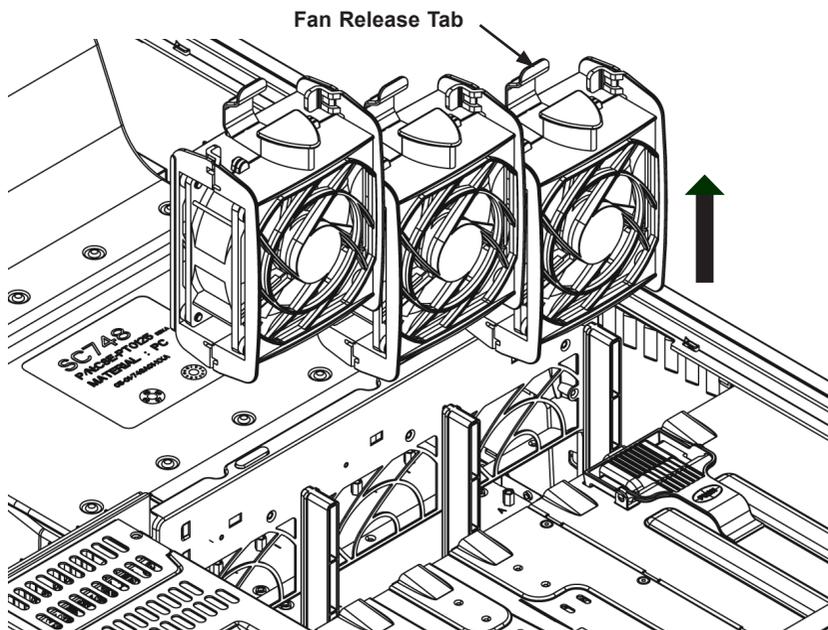


Figure 5-23: Front Chassis Fans

### Replacing a Front Chassis Fan

#### *Front Fan Replacement Procedure*

1. Open the chassis cover and determine which fan has failed. Because the fans are hot-swappable, the chassis does not have to be powered down.
2. Press the fan release tab and lift the failed fan from the chassis. Front fans must be pulled straight up.
3. Place the new fan into the vacant space in the housing while making sure the arrows on the top of the fan (indicating air direction) point in the same direction as the arrows on the other fans. As soon as the fan is connected, it will begin working.

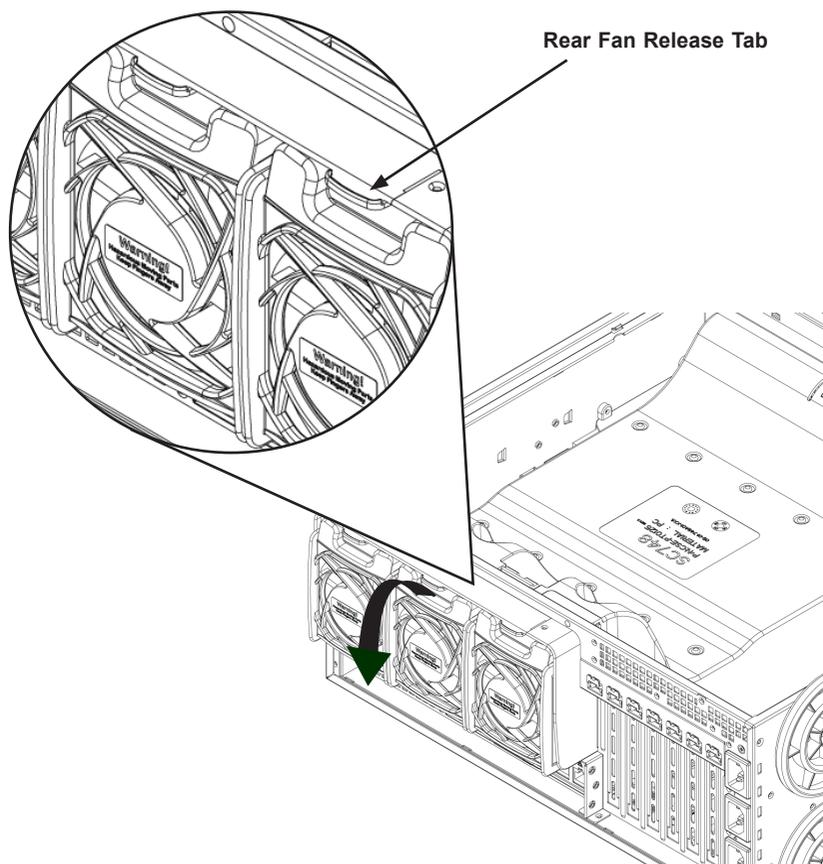

**Figure 5-24: Rear Chassis Fans**  
**Replacing a Rear Chassis Fan**

***Rear Fan Replacement Procedure***

1. Press the rear fan release tab.
2. Pull the fan from the chassis top first.
3. Place the new fan in the chassis bottom first.
4. Push the fan fully into the housing until the fan clicks into place.

## 5-9 Power Supply

Depending on your chassis model, the SC748 Chassis has a 1000W or 1200W (redundant) power supply. This power supply is auto-switching capable. This enables it to automatically sense and operate at a 100v to 240v input voltage. An amber light will be illuminated on the power supply when the power is off. An illuminated green light indicates that the power supply is operating.

### Power Supply Failure

In redundant power supply models, the system automatically switches to the second power supply when the first fails. If your system has only one power supply, the system shuts down in the unlikely event of a power failure.

#### *Replacing the Power Supply*

1. Power down the server and unplug the power cord. If your chassis includes a redundant power supply (at least two power modules), you can leave the server running and remove only one power supply.
2. Push the release button on the back of the power supply.
3. Pull the power supply out using the handle provided.
4. Replace the failed power module with the same model.
5. Push the new power supply module into the power bay until you hear a click.
6. Plug the AC power cord back into the module and power up the server.

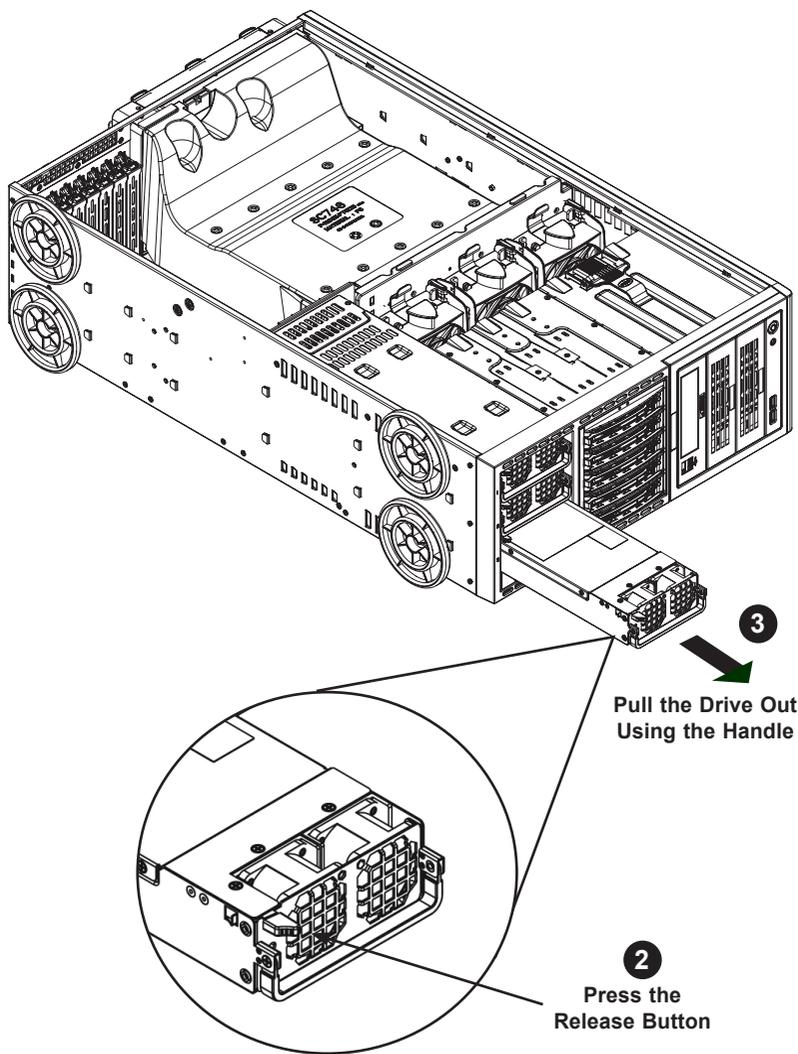


Figure 5-25: Removing a Power Supply

## Chapter 6

# Rack Installation

### 6-1 Overview

This chapter provides a quick setup checklist to get your chassis up and running. Following these steps in the order given should enable you to have the system operational within a minimum amount of time.

### 6-2 Unpacking the System

You should inspect the box the chassis was shipped in and note if it was damaged in any way. If the chassis itself shows damage you should file a damage claim with the carrier who delivered it.

Decide on a suitable location for the rack unit that will hold your chassis. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated. You will also need it placed near a grounded power outlet. Be sure to read the Rack and Server Precautions in the next section.

### 6-3 Preparing for Setup

The box your chassis was shipped in should include two sets of rail assemblies, two rail mounting brackets and the mounting screws you will need to install the system into the rack. Please read this section in its entirety before you begin the installation procedure outlined in the sections that follow.

#### Choosing a Setup Location

- Leave enough clearance in front of the rack to enable you to open the front door completely (~25 inches).
- Leave approximately 30 inches of clearance in the back of the rack to allow for sufficient airflow and ease in servicing.
- This product is for installation only in a Restricted Access Location (dedicated equipment rooms, service closets and the like).



## Warnings and Precautions!



### Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are fully extended to the floor with the full weight of the rack resting on them.
- In single rack installation, stabilizers should be attached to the rack.
- In multiple rack installations, the racks should be coupled together.
- Always make sure the rack is stable before extending a component from the rack.
- You should extend only one component at a time - extending two or more simultaneously may cause the rack to become unstable.

### General Server Precautions

- Review the electrical and general safety precautions that came with the components you are adding to your chassis.
- Determine the placement of each component in the rack *before* you install the rails.
- Install the heaviest server components on the bottom of the rack first, and then work up.
- Use a regulating uninterruptible power supply (UPS) to protect the server from power surges, voltage spikes and to keep your system operating in case of a power failure.
- Allow the hot plug hard drives and power supply modules to cool before touching them.

- Always keep the rack's front door and all panels and components on the servers closed when not servicing to maintain proper cooling.

## **Rack Mounting Considerations**

### ***Ambient Operating Temperature***

If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the ambient temperature of the room. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (T<sub>mra</sub>).

### ***Reduced Airflow***

Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

### ***Mechanical Loading***

Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

### ***Circuit Overloading***

Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on overcurrent protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

### ***Reliable Ground***

A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).

## 6-4 Rack Mounting Instructions

This section provides information on installing the SC748 chassis into a rack unit with the rails provided. There are a variety of rack units on the market, which may mean the assembly procedure will differ slightly. You should also refer to the installation instructions that came with the rack unit you are using.

**NOTE:** The outer rail is adjustable from 26" to 38.25".

### Removing the Chassis Cover and Feet

The SC748 chassis is shipped with the chassis cover and feet pre-installed. Both the feet and cover must be removed for before installing the rails.

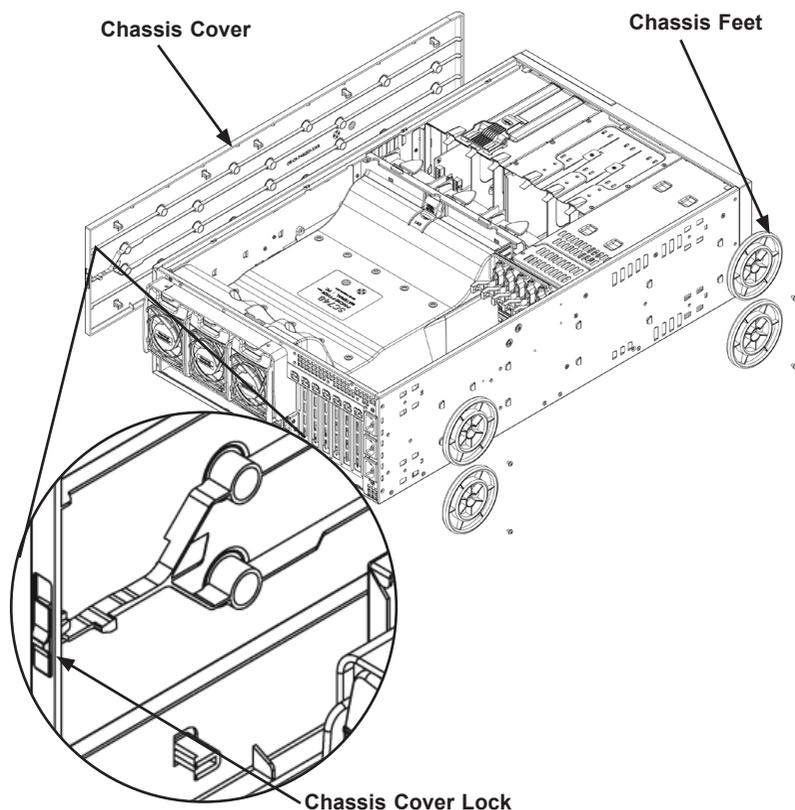


Figure 6-1: Remove Feet and Chassis Top Cover

***Removing the Chassis Top Cover***


1. Locate the chassis cover lock (blue lever) at the rear of the chassis cover.
2. Slide the chassis cover lock to the right and push chassis cover forward.
3. Lift the chassis top cover off the chassis.

***Removing the Chassis Feet***

1. Place the chassis on its side with the chassis side cover facing upward.
2. Remove the screw holding the chassis foot in place.
3. The foot lock is a tab located in the center of the foot that prevents the foot from sliding. Using a flat head screwdriver, **gently** lift the foot lock upward and slide the foot toward the rear of the chassis.
4. Repeat steps 2 and 3 with each remaining foot.


## Identifying the Sections of the Rack Rails

The chassis package includes two rack rail assemblies in the rack mounting kit. Each assembly consists of two sections: an inner fixed chassis rail that secures directly to the server chassis and an outer fixed rack rail that secures directly to the rack itself.

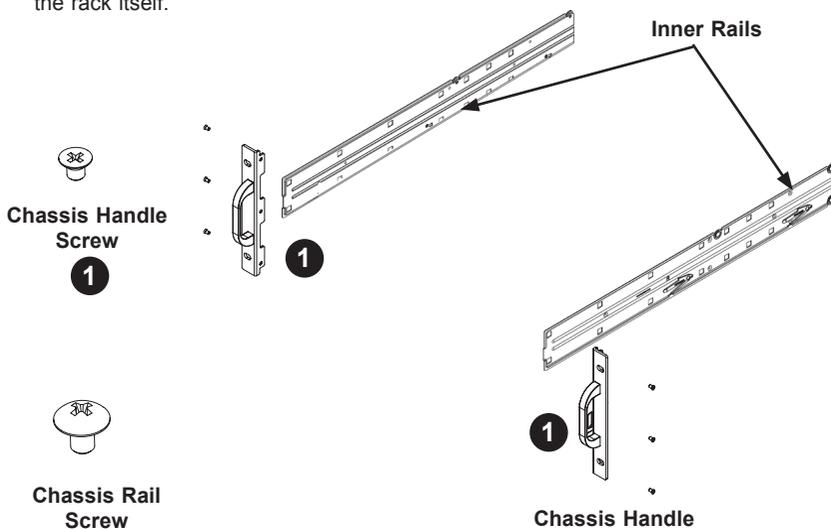


**Figure 6-2: Identifying the Inner Rails and Chassis Handles**  
**Installing the Chassis Handles and Inner Rails**

1. Locate the chassis handles (2) and handle screws (6).

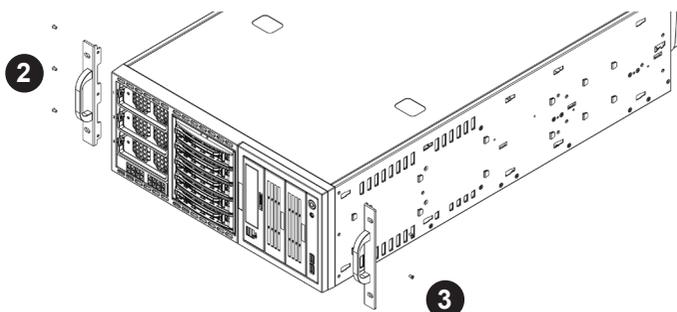


**Figure 6-3: Identifying the Inner Rails and Chassis Handles**

2. Align the chassis handle with the front of the chassis and secure with the three chassis handle screws.
3. Repeats steps 1 and 2 with the other handle.

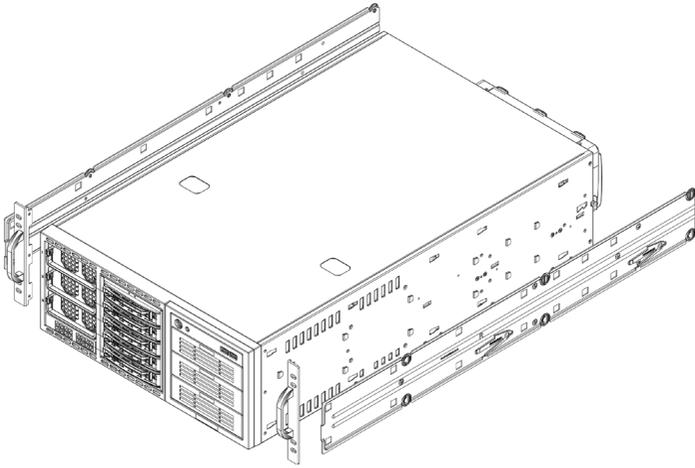

**Figure 6-4: Installing the Inner Rack Rails**


4. Locate the inner rails (2) and screws (12) in the shipping package.
5. Align the inner rails against the chassis, as shown. Confirm that the rails are flushed against the edge of the chassis.
6. Tighten the screws. Do not over tighten.
7. Repeat steps 5 and 6 with the other inner rail.

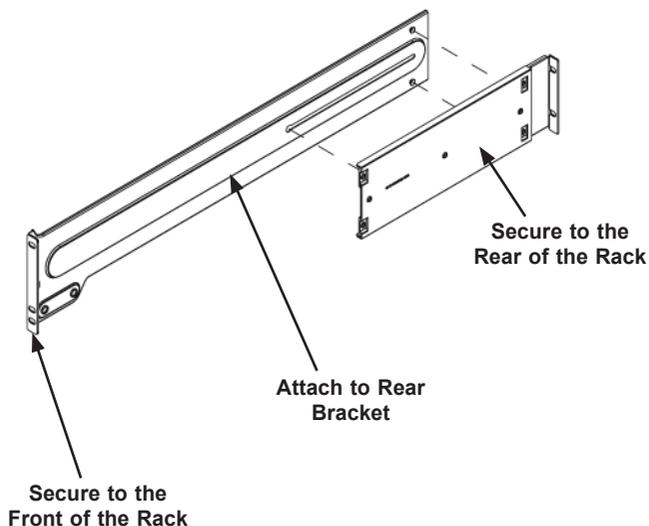

**Figure 6-5: Assembling the Outer Rails**

***Installing the Outer Rails to the Rack***


1. Attach the front and rear short brackets to the outside of the long bracket. Both bracket ends must face the same direction.
2. Adjust both the brackets to the proper distance so that the rail fits snugly into the rack.
3. Secure the front side of the outer rail with two M5 screws and the rear side of the outer rail with three M5 screws. **NOTE:** The outer rail is adjustable from approximately 26" to 38.25".
4. Repeat steps 1-3 for the left outer rail.

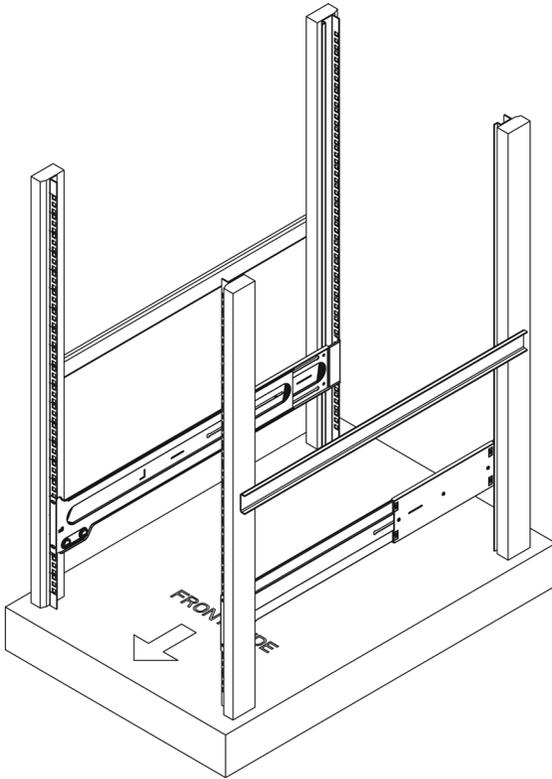

**Figure 6-6. Installing the Rack Rails**

***Installing the Chassis into a Rack***

1. Confirm that chassis includes the inner rails and the outer rails.
2. Line chassis rails with the front of the rack rails (C).
3. Slide the chassis rails into the rack rails, keeping the pressure even on both sides (you may have to depress the locking tabs when inserting). When the server has been pushed completely into the rack, you should hear the locking tabs "click".

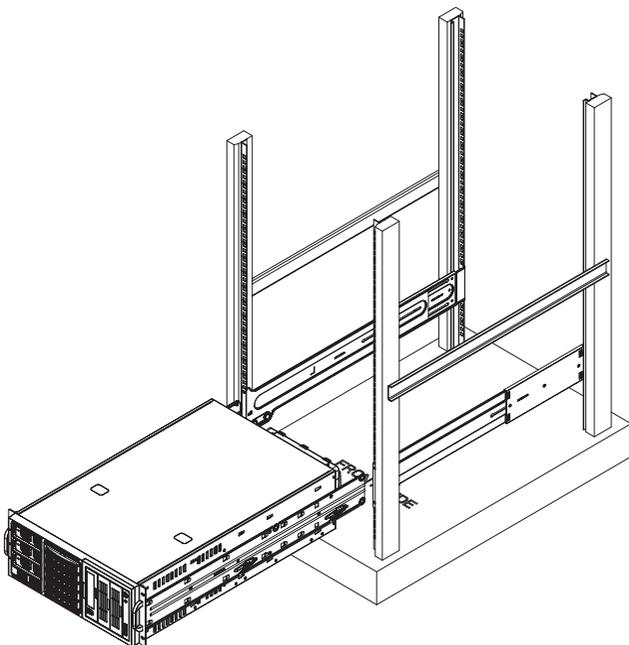

**Figure 6-7: Installing the Chassis into a Rack**

## 6-5 Tower Configuration Instructions

The SC748 chassis is shipped with the chassis cover and feet pre-installed. To use the chassis as a desktop server, no other installation is required.

Use the instructions in this section if you have converted the chassis for rack use and need to return the chassis to tower mounting.


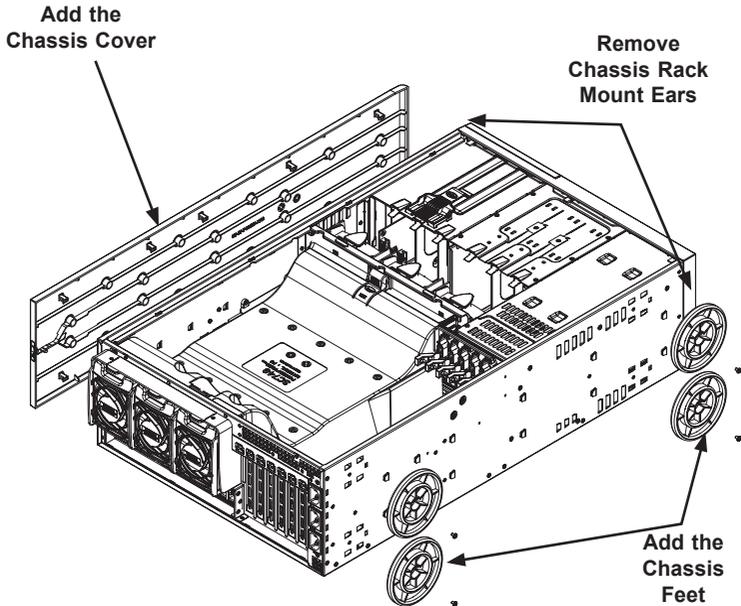


Figure 6-8: Adding Chassis Feet and Top Cover

### *Installing the Chassis Cover*

1. Remove the rack mount ears.
2. Align the cover post with the corresponding holes on the top of the chassis and place the cover on top of the chassis. The cover should overhang approximately one-half inch over the front of the chassis.
3. Slide the chassis cover toward the rear of the chassis to lock the cover into place.

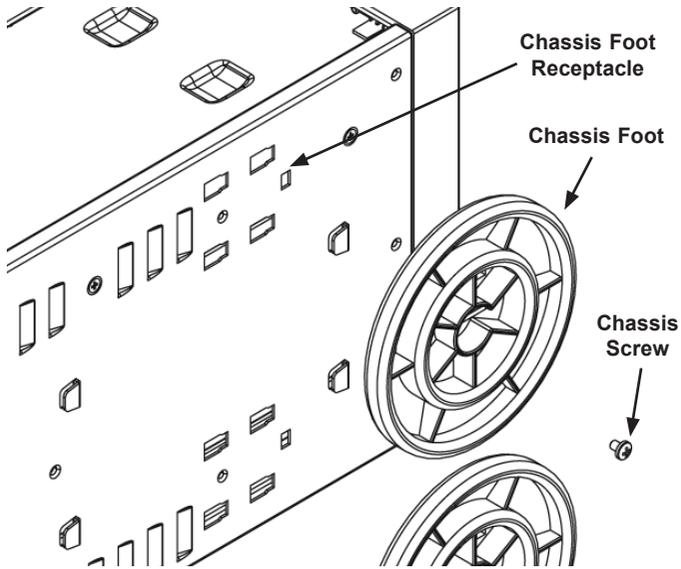

**Figure 6-9: Placing Chassis Feet**

***Placing the Chassis Feet***

1. Place the chassis foot in the foot receptacle and slide the foot toward the front of the chassis. The foot should lock into place.
2. Secure the foot to the chassis using one screw enclosed in the packaging.
3. Repeat steps 1 and 2 for the remaining three chassis feet.

## Appendix A

### SC748 Chassis Cables

#### A-1 Overview

This appendix lists supported cables for your chassis system. It only includes the most commonly used components and configurations. For more compatible cables, refer to the manufacturer of the motherboard you are using and our Web site at: [www.supermicro.com](http://www.supermicro.com).

#### A-2 Cables Included with SC748TQ Chassis (SAS/SATA)

SC748TQ-R1200 and SC748TQ-R1000			
Part #	Type	Length	Description
CBL-0044L	Cable	24"	Serial ATA, lead-free
CBL-0051L	Cable	60cm	Round floppy cable
CBL-0084	Cable	6"	Split converter cable
CBL-0087	Ribbon, Round	20"	16 pin to 16 pin ribbon cable for control panel
CBL-0209L	Cable	210mm	4 to 3 pin fan power cable (3)

#### A-3 Cables Included with SC748S Chassis (SCSI)

SC748S-R1000			
Part #	Type	Length	Description
CBL-0051L	Cable	60cm	Round floppy cable
CBL-0063L	Cable	20"	Ultra 320, lead-free
CBL-0084	Cable	6"	Split converter cable
CBL-0087	Ribbon, Round	20"	16 pin to 16 pin ribbon cable for control panel

## A-4 Compatible Cables

These cables are compatible with the SC748 Chassis.

This section lists cables included with the SC748 Chassis packages

### Alternate SAS/SATA Cables

Some compatible motherboards have different connectors. If your motherboard has only one SAS connector that the SAS/SATA cables must share, use one of the following cables. These cables must be purchased separately.

**Cable Name:** SAS Cable

**Quantity:** 1

**Part #:** CBL-0175L

**Alt. Name:** "Big Four"

Description: This cable has one SFF-8484 (32 pin) connector on one end and 4 SAS connectors (7 pins each) at the other. This cable connects from the Host (motherboard or other controller) to the backplane SAS hard drive port.

**Cable Name:** SAS Cable

**Quantity:** 1

**Part #:** CBL-0116

**Alt. Name:** iPass or "Small Four"

Description: This cable has one iPass (SFF-8087/mini-sas) connector (36 pins) at one end and 4 SAS connectors on one end. This cable connects from the Host (motherboard or other controller) to the backplane SAS hard drive port.

## Extending Power Cables

Although Super Micro chassis are designed with to be efficient and cost-effective, some compatible motherboards have power connectors located in different areas.

To use these motherboards you may have to extend the power cables to the mother boards. To do this, use the following chart as a guide.

<b>Power Cable Extenders</b>		
<b>Number of Pins</b>	<b>Cable Part #</b>	<b>Length</b>
24 pin	CBL - 0042	7.9"(20 CM)
20 pin	CBL - 0059	7.9"(20 CM)
8 pin	CBL - 0062	7.9"(20 CM)
4 pin	CBL - 0060	7.9"(20 CM)

## Front Panel to the Motherboard

The SC748 chassis includes a cable to connect the chassis front panel to the motherboard. If your motherboard uses a different connector, use the following list to find a compatible cable.

<b>Front Panel to Motherboard Cable (Ribbon Cable)</b>		
<b>Number of Pins (Front Panel)</b>	<b>Number of Pins (Motherboard)</b>	<b>Cable Part #</b>
16 pin	16 pin	CBL - 0049
16 pin	20 pin	CBL - 0048
20 pin	20 pin	CBL - 0047
16 pin	various*	CBL - 0068
20 pin	various*	CBL - 0067

\* Split cables: Use these cable if your motherboard requires several different connections from the front panel.

**Notes**

## Appendix B

### SC748 Power Supply Specifications

This appendix lists power supply specifications for your chassis system.

<b>PWS-1K01-1R</b>	
	<b>1000W (Redundant = X2)</b>
<b>MFR Part #</b>	PWS-1K01-1R
<b>Rated AC Voltage</b>	100 - 240V 50 - 60Hz 15 - 7 Amp
<b>+5V standby</b>	4 Amp
<b>+12V</b>	66 Amp
<b>+5V</b>	20 Amp
<b>-12V</b>	0.6 Amp
<b>+3/3V</b>	20 Amp

<b>PWS-1K22-1R</b>	
	<b>1200W (Redundant = X2)</b>
<b>MFR Part #</b>	PWS-1K22-1R
<b>Rated AC Voltage</b>	100 - 240V 50 - 60Hz 6 - 15 Amp
<b>+5V standby</b>	4 Amp
<b>+12V</b>	100 Amp
<b>+5V</b>	30 Amp
<b>-12V</b>	0.6 Amp
<b>+3/3V</b>	25 Amp

## Notes

## Appendix C

### CSE-M35TQ Mobile Rack Specifications

To avoid personal injury and property damage, carefully follow all the safety steps listed below when accessing your system or handling the components.

#### C-1 ESD Safety Guidelines

Electric Static Discharge (ESD) can damage electronic components. To prevent damage to your system, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing a component from the antistatic bag.
- Handle the RAID card by its edges only; do not touch its components, peripheral chips, memory modules or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the card and peripherals back into their antistatic bags when not in use.


#### C-2 General Safety Guidelines

- Always disconnect power cables before installing or removing any components from the computer, including the mobile rack.
- Disconnect the power cable before installing or removing any cables from the mobile rack.
- Make sure that the mobile rack is securely and properly installed on the motherboard to prevent damage to the system due to power shortage.

#### C-3 An Important Note to Users

- All images and layouts shown in this user's guide are based upon the latest PCB Revision available at the time of publishing. The card you have received may or may not look exactly the same as the graphics shown in this manual.

## C-4 Front Connectors and Jumpers

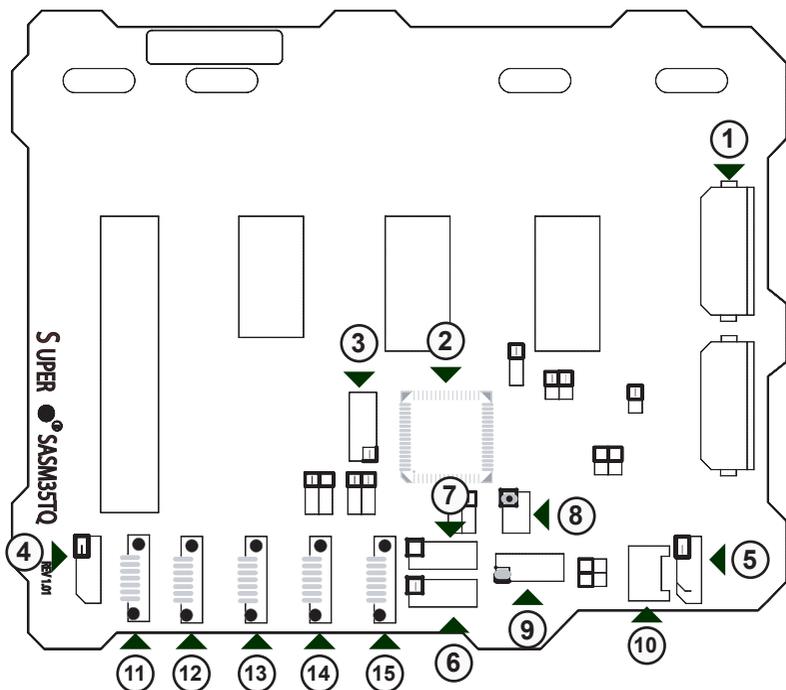

### Front Connectors

- |  |                        |
|--|------------------------|
| 1. Power Connectors (4-pin): JP10 and JP13 | 8. Upgrade JP46        |
| 2. Chip: MG 9072                           | 9. ACT IN JP26         |
| 3. JTAG JP47                               | 10. FAN Connector JP22 |
| 4. I <sup>2</sup> C Connector #1 JP44      | 11. SAS Port #0 J5     |
| 5. I <sup>2</sup> C Connector#2 JP45       | 12. SAS Port #1 J6     |
| 6. SideBand Connector #1 JP51              | 13. SAS Port #2 J7     |
| 7. SideBand Connector #2 JP52              | 14. SAS Port #3 J8     |
|  | 15. SAS Port #4 J10    |

## C-5 Front Connector and Pin Definitions

### 1. Mobile rack Main Power Connectors

The 4-pin connectors, designated JP10 and JP13, provide power to the mobile rack. See the table on the right for pin definitions.

Mobile rack Main Power 4-Pin Connector (JP10 and JP13)	
Pin#	Definition
1	+12V
2 and 3	Ground
4	+5V

### 2. MG9072 Chip

The MG9072 is an enclosure management chip that supports the SES-2 controller and SES-2 protocols.

### 3. JTAG Connector

The JTAG connector, designated JP47, is used for diagnostic purposes only. This connector should only be used a certified and experienced technician.

### 4. and 5. I<sup>2</sup>C Connectors

The I<sup>2</sup>C Connectors, designated JP44 and JP45, are used to monitor HDD activity and status. See the table on the right for pin definitions.

I <sup>2</sup> C Connector Pin Definitions (JP44 and JP45)	
Pin#	Definition
1	Data
2	Ground
3	Clock
4	No Connection

## 6 and 7. Sideband Headers

The sideband headers are designated JP51 and JP52. For SES-2 to work properly, you must connect an 8-pin sideband cable. See the table to the right for pin definitions.

Sideband Headers (JP51 and JP52)			
Pin #	Definition	Pin #	Definition
2	Mobile rack Addressing (SB5)	1	Controller ID (SB6)
4	Reset (SB4)	3	GND (SB2)
6	GND (SB3)	5	SDA (SB1)
8	Mobile rack ID (SB7)	7	SCL (SB0)
10	No Connection	9	No Connection

## 8. Upgrade Connector

The Upgrade connector, designated JP46, is used for diagnostic purposes only. This connector should only be accessed by a certified and experienced technician.

## 9. Activity LED Header

The activity LED header, designated JP26, is used to indicate the activity status of each SAS drive. For the Activity LED Header to work properly, connect using a 10-pin LED cable.

SAS Activity LED Header Pin Definitions (JP26)			
Pin #	Definition	Pin #	Definition
1	ACT IN#0	6	ACT IN#4
2	ACT IN#1	7	ACT IN#5
3	ACT IN#2	8	ACT IN#6
4	ACT IN#3	9	ACT IN#7
5	Ground	10	Empty

## 10. Fan Connector


The 3-pin connectors, designated JP22, provide power to the mobile rack fan. See the table on the right for pin definitions.

Fan Connectors (JP22)	
Pin#	Definition
1	Ground
2	+12V
3	Tachometer

## 11 - 15. SAS Ports

The SAS ports are used to connect the SAS drive cables. The 5 ports are designated #0 - #4. Each port is also compatible with SATA drives.


## C-6 Front Jumper Locations and Pin Definitions

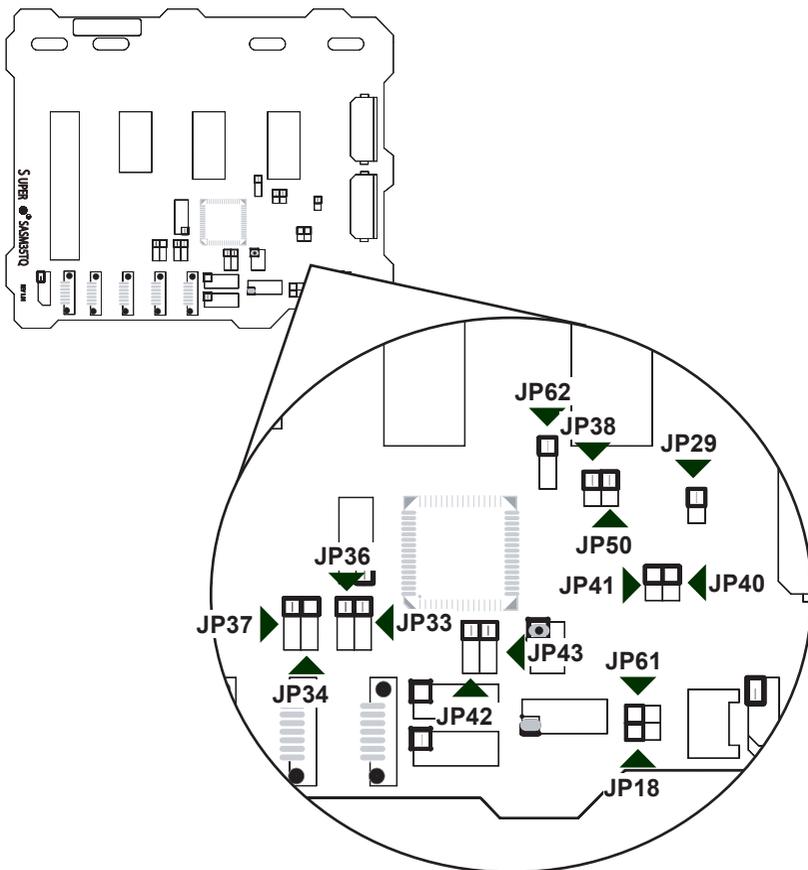

### Explanation of Jumpers

To modify the operation of the mobile rack, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board.

Note: On two pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.

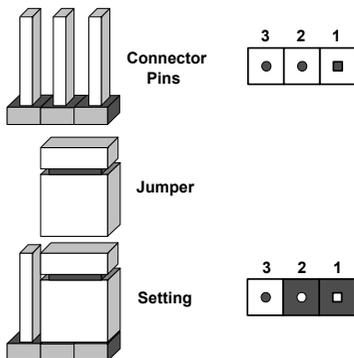

<b>Jumper Settings</b>		
<b>Jumper</b>	<b>Jumper Settings</b>	<b>Notes</b>
JP18	Open: Enabled Closed: Disabled	Buzzer Reset
JP29	Open: Default Closed: Reset	9072 Chip Reset

### **Fan Jumper Settings**

This mobile rack can use up to four fans. To utilize each fan, you must configure both jumpers as instructed below.

<b>Fan Jumper Settings</b>		
<b>Jumper</b>	<b>Jumper Settings</b>	<b>Note</b>
JP61	Closed: With Fan Open: No Fan	FAN#1
JP62	1-2:With Fan 2-3:No Fan	FAN#1

## I2C and SGPIO Modes and Jumper Settings

This mobile rack can utilize I2C or SGPIO. I2C is the default mode and can be used without making changes to your jumpers. The following information details which jumpers must be configured to use SGPIO mode or restore your mobile rack to I2C mode.

<b>I<sup>2</sup>C Setting (Default)</b>		
<b>Jumper</b>	<b>Jumper Setting</b>	<b>Note</b>
JP33	2-3	Controller ID #1
JP34	1-2:ID#0	Backplane ID #1
JP36	2-3	Controller ID #2
JP37	2-3:ID#1	Backplane ID #2
JP38	Closed	I <sup>2</sup> C Reset #2
JP40	Open	I <sup>2</sup> C Reset SDOOUT #1
JP41	Open	I <sup>2</sup> C Reset SDOOUT #2
JP42	2-3	Backplane ID SDIN #1
JP43	2-3	Backplane ID SDIN #2
JP50	Closed	I <sup>2</sup> C Reset #1


<b>SGPIO Setting</b>		
<b>Jumper</b>	<b>Jumper Setting</b>	<b>Note</b>
JP33	1-2	Controller ID #1
JP34	1-2:ID#0	Backplane ID #1
JP36	1-2	Controller ID #2
JP37	1-2:ID#0	Backplane ID #2
JP38	Open	I <sup>2</sup> C Reset #2
JP40	Closed	I <sup>2</sup> C Reset SDOOUT #1
JP41	Closed	I <sup>2</sup> C Reset SDOOUT #2
JP42	1-2	Blackplane ID SDIN #1
JP43	1-2	Blackplane ID SDIN #2
JP50	Open	I <sup>2</sup> C Reset #1

## SAS Port Connections in I2C and SGPIO Settings

Use the following chart when connecting this mobile rack. If you connect the SAS ports out of order, you will not be able to easily identify drives using the LED function.

<b>SAS Port Connections in I2C and SGPIO Settings</b>		
<b>Port #</b>	<b>I<sup>2</sup>C</b>	<b>SGPIO</b>
0 - 3	I <sup>2</sup> C #1	Sideband #1
4	I <sup>2</sup> C #2	Sideband #2

## C-7 Rear Connectors and LED Indicators

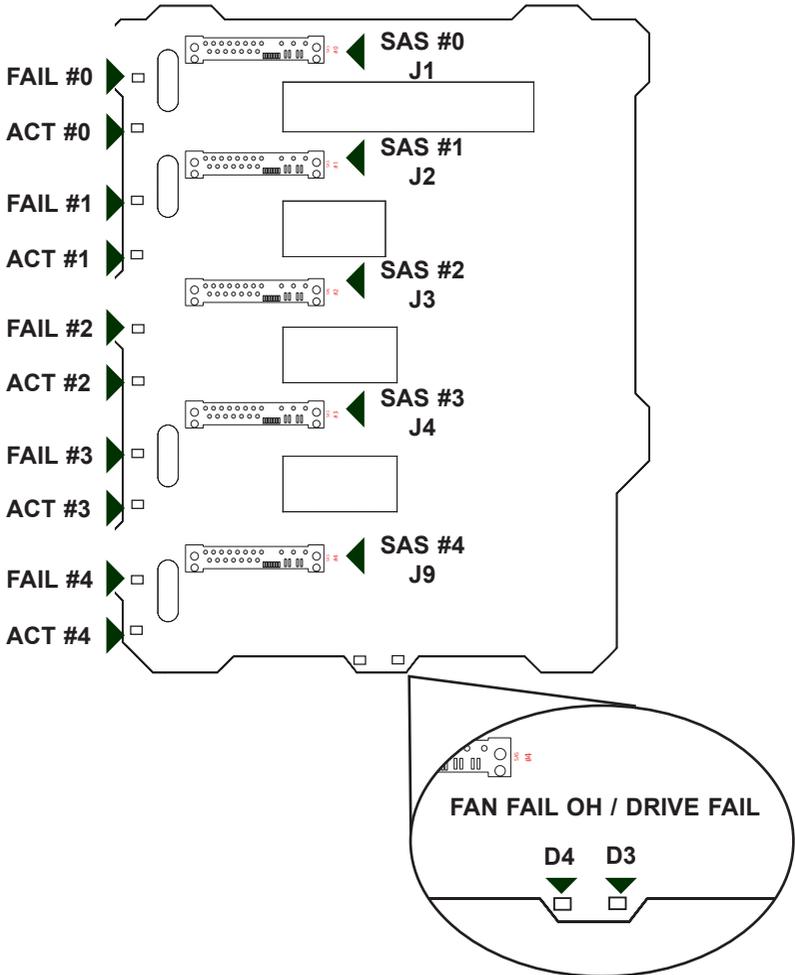

Rear SAS/SATA Connectors	
Rear Connector	SAS Drive Number
SAS #0	SAS/SATA HDD #0
SAS #1	SAS/SATA HDD #1
SAS #2	SAS/SATA HDD #2
SAS #3	SAS/SATA HDD #3
SAS #4	SAS/SATA HDD #4

<b>Rear LED Indicators</b>		
<b>Rear LED</b>	<b>Hard Drive Activity</b>	<b>Failure LED</b>
SAS #0	D12	D5
SAS #1	D13	D6
SAS #2	D14	D7
SAS #3	D15	D8
SAS #4	D18	D19

<b>Mobile Rack Backplane LEDs</b>		
<b>LED</b>	<b>Hard Drive Activity</b>	<b>Failure LED</b>
D3	ON	Overheat/Drive Failure LED indicator (Red light: flashing, buzzer on)
D4	ON	Overheat/Drive Failure LED indicator (Red light: flashing, buzzer on)

## Installation Procedures

### C-8 Tools Needed

The following tools are needed for the installation of the mobile rack into the chassis:

- Phillips head screwdriver
- Antistatic Strap (recommended)

### C-9 Important Safety Guidelines


This product should be assembled and/or serviced by qualified and experienced technicians. To avoid personal injury and property damage, carefully follow the guidelines listed below.

***Before accessing the Mobile Rack:***

1. Turn off all peripheral devices and the power supply connected to the chassis and unplug all power cords from the system or the wall outlets.
2. Disconnect all the cables and label the cables for easy identification.
3. Use a grounded wrist strap designed to prevent static discharge when handling components.
4. Save all the screws and fasteners for later use. (If necessary, label these screws or fasteners for easy identification.)
5. Follow the instructions given in the following section to remove and install the cooling fan, hard disks and the rear window.

## C-10 Connecting Cables to the Mobile Rack


Before connecting cables the mobile rack, you must remove the exhaust fan. In some circumstances, the backplane may need to be removed.

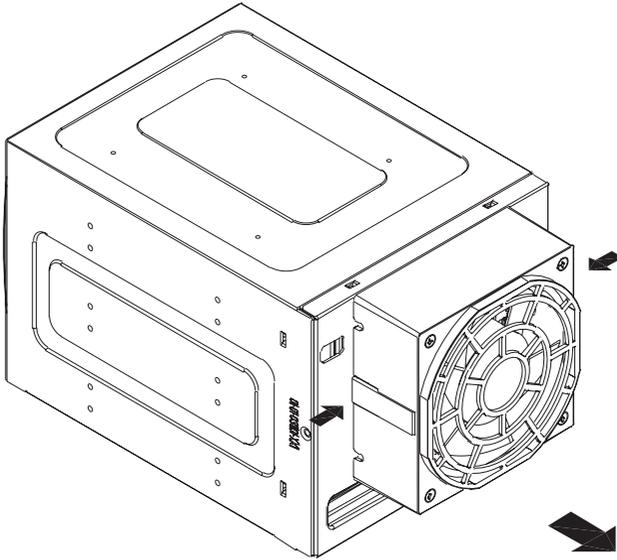

**Figure C-5: Removing Mobile Rack Fan**


### ***Connecting SAS/SATA and Power Cables to the Mobile Rack:***

1. Before connecting the mobile rack, you must remove exhaust fan. To do this, pinch the tabs on each side of the unit (as illustrated).

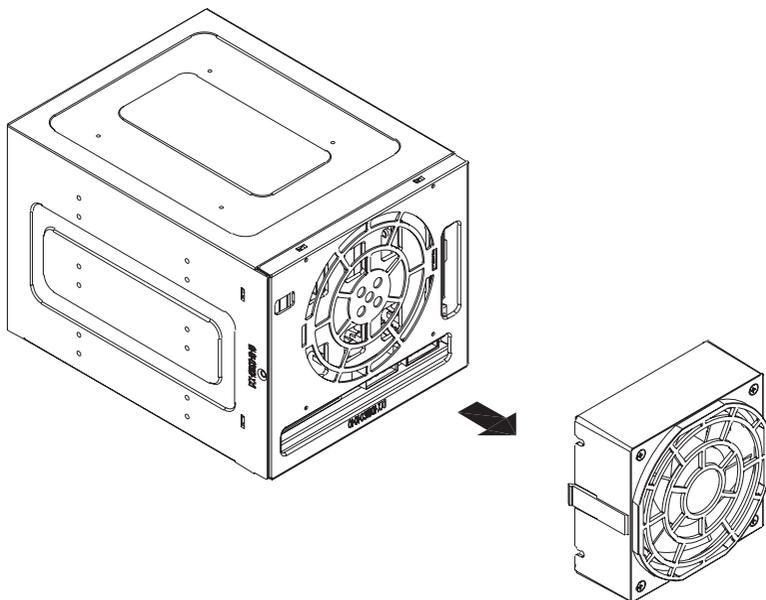


**Figure C-6: Removing Mobile Rack Fan**

2. Pull the exhaust fan from the chassis.

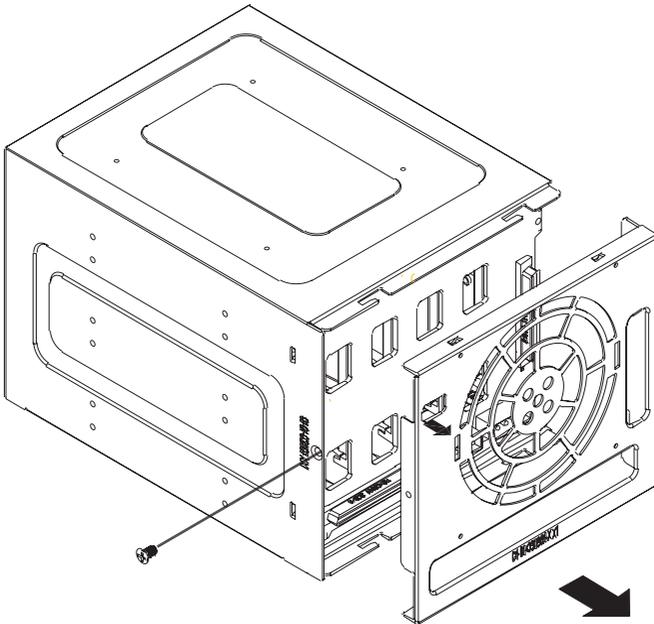

**Figure C-7: Removing Mobile Rack Fan**

3. Remove the bracket screw and pull the bracket from the mobile rack.
4. Connect the SAS cables and power cables to the mobile rack backplane.
5. Replace the bracket, bracket screw, and fan to the mobile rack.

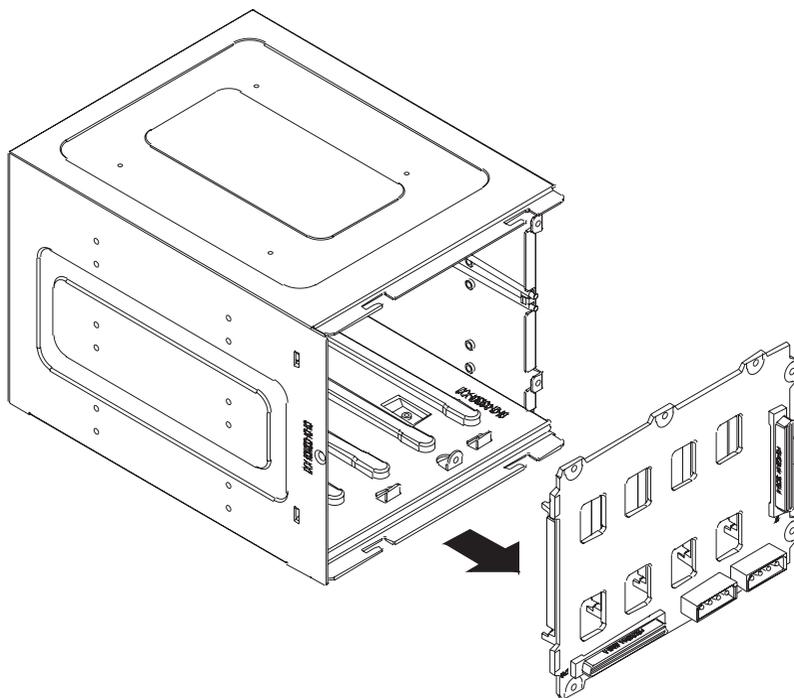

**Figure C-8: Removing Mobile Rack Fan**

### **Additional Installation Information**

The backplane may be separated from the mobile rack by removing the seven screws holding the backplane in place.

## Appendix D

### CSE-M35S/CSE-M35T1 Mobile Rack Specifications

Supermicro's CSE-M35S/CSE-M35T1 mobile rack series offers the cutting edge technology with greater flexibility. The CSE-M35T1 supports five Serial ATA hot-swappable hard drives that yield a unparalleled storage capacity without compromising productivity by eliminating possible system downtime. The CSE-M35S also accommodates five SCSI SCA 320/160 hard drives which provide configuration flexibility and maximum data integrity.

#### D-1 Packing List

Please check to see if you have received all the items listed below:

- CSE-M35S/CSE-M35T1 Mobile Rack
- 90mm-Exhaust Fan (Fan-0057)
- Screws:
  - Thirteen (13) counts of Flat Head Screws
  - Twenty-four (24) counts of Round Head Screws
  - Seven (7) counts of Round Head Screws with Lock-Washer
- Drive Carrier, five (5)CSE-PT17/CSE-PT17(B)(-black)

(For CSE-M35T1 only)

- Serial ATA Backplane (CSE-SATAM35)
- Five (5) Serial ATA Cables (CBL-0044)
- Serial ATA LED cable (CBL-0057)

(For CSE-M35S only)

- SCSI Backplane (CSE-SCAM942)
- SCSI Cable (CBL-027-U320)

## D-2 Technical Specifications

<b>Occupancy</b>	Three (3) 5.25" Drive Bays
<b>Capacity</b>	Five (5) 1" SCA Ultra320/160 Hard Drives with SAF-TE built-in (*CSE-M35S only) Five (5) 1" Host Receptacle Connectors, SATA hot-swap hard drives (*CSE-M35T-1 only)
<b>Cooling Subsystem</b>	One (1) 9cm Exhaust Fan
<b>System Monitoring</b>	Fan Fail Detection LED and Alarm Overheat LED indication Drive Fail Alarm and Indication (*CSE-M35S only) Built-in Termination (*CSE-M35S only)
<b>Dimension (WxHxD)</b>	146mm x 129mm x 245mm (5.7 in x 5.0 in x 9.6 in)
<b>Weight</b>	Net: 5.9lb (2.9 kg), Gross: 7.5lb (3.7 kg)

### Chassis Supported:

SC762, SC830, SC942, SC748

## D-3 Jumper Settings

### Jumper Settings for the CSE-M35S (SCSI):

Description	Setting
Buzzer Reset	Closed: Enable, Open: Disable (*Default)
SCSI Termination	Closed: Enable (*Default), Open: Disable
SCSI ID Selection	1-2: SCSI Ids: 0,1,2,3,4 (*Default), 2-3: SCSI Ids: 9,10,11,12,13
GEM 318 IDs	1-2: ID6 (*Default), 2-3: ID8
Fan Sense	Pins 1-2: Enable (*Default) (If a fan is not present, the alarm will sound.), Pins 2-3: Disable

### Location of Jumpers


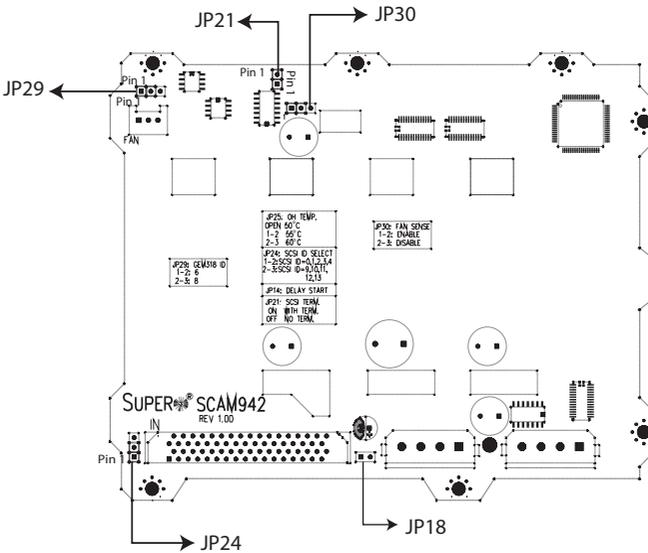


Figure D-1: Jumper Locations

### Jumper Settings for the CSE-M35T1 (SATA):

Jumper	Description	Setting
JP18	Buzzer Reset	Closed: Enable, Open: Disable (*Default)
JP25	Overheat Temperature	Open: 45°C 1-2: 50°C (*Default), 2-3: 55°C
JP26	Act#1-Act#5	Connect this header to CBL-0057 (SATA LED Cable)
JP28:	Fan Sense	1-2: Enabled (if a fan is not present, the alarm will sound) (*Default) 2-3: Disabled

#### Location of Jumpers

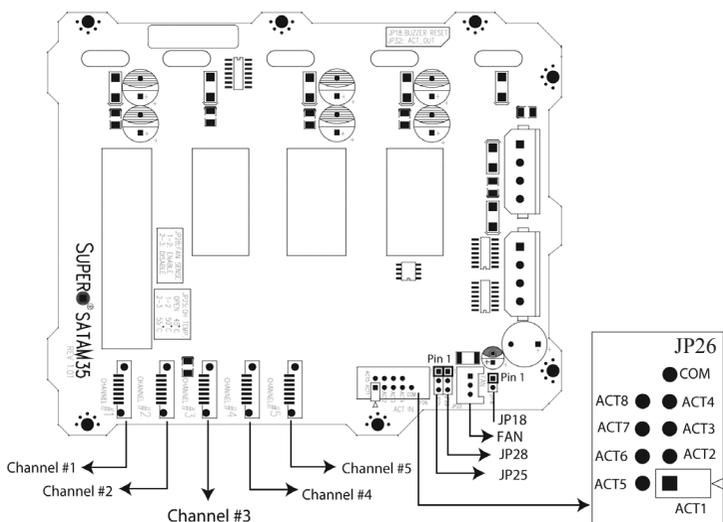

**Figure D-2: Jumper Locations**

Activity LEDs-  
Pin Definitions

- Act. LED 1 → Channel 1
- Act. LED 2 → Channel 2
- Act. LED 3 → Channel 3
- Act. LED 4 → Channel 4
- Act. LED 5 → Channel 5


## D-4 Installation Procedures

### *For the CSE-M35S:*

1. SCSI IDs are assigned automatically by the backplane. **Do not set IDs manually on the drives.** See the previous section for SCSI ID jumper settings.
2. SCSI termination is enabled by default on the SCSI backplane.


### *Accessing Hot-Swappable Drives:*

1. Push the release button located beside the drive LEDs (as shown below:)

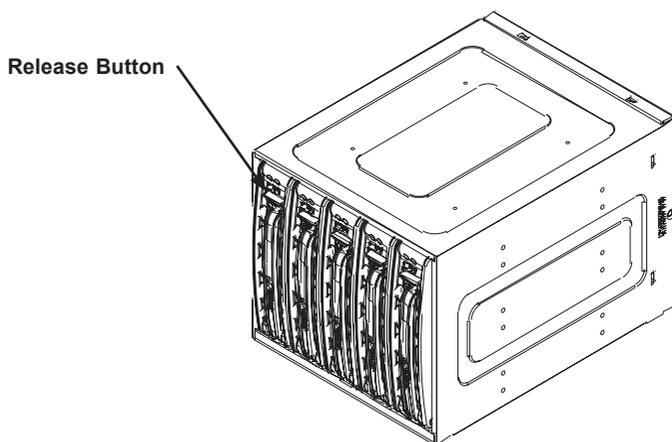


**Figure D-3: Hot-Swappable Drive Release Button**

2. Swing the handle outward and pull out the unit (as shown below:)

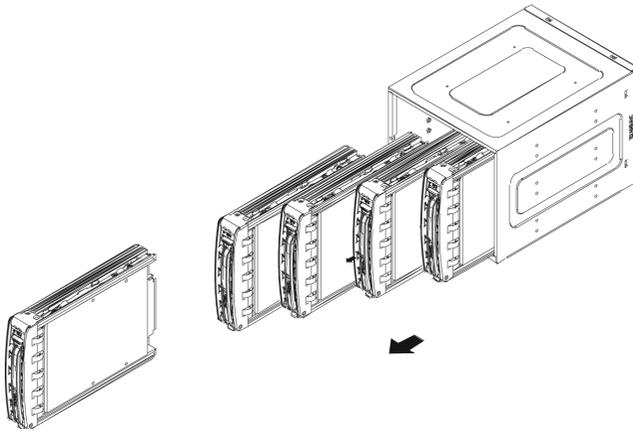

**Figure D-4: Removing Drives**


3. Mount a drive in a carrier (as shown below:)

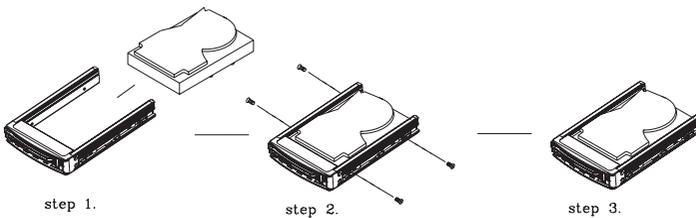


**Figure D-5: Mounting Drives**

**B. Accessing the Exhaust Fan:**

1. Push the tabs located on both sides of the unit (as shown below:)

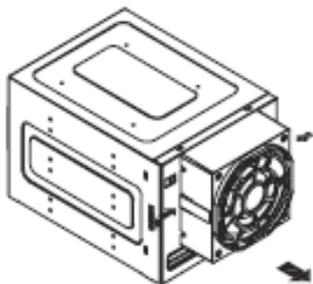**Figure D-6: Removing the Exhaust Fan**


2. Pull out the fan (as shown below:)

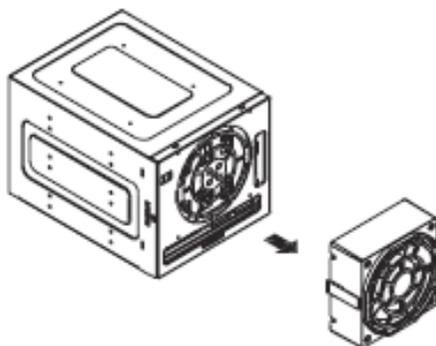**Figure D-7: Pulling Off the Exhaust Fan**


Note: If using this mobile rack with another chassis, the CSE-M35 rear exhaust fan should not be used. Instead, the hot-swappable 120mm chassis fans included with the chassis should be connected to the backplane of the CSE-M35S/CSE-M35T1 mobile rack.

C. Accessing the Drive Backplane:


1. Unscrew the screw located on the side of the unit (as shown below:)

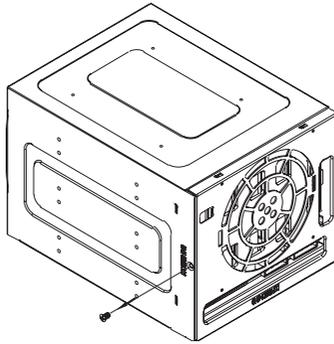

2. Pull out the rear bracket (as shown below:)

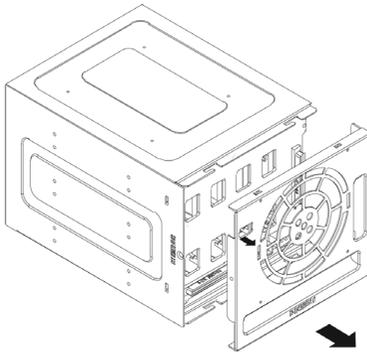

3. Access the backplane (as shown below:)

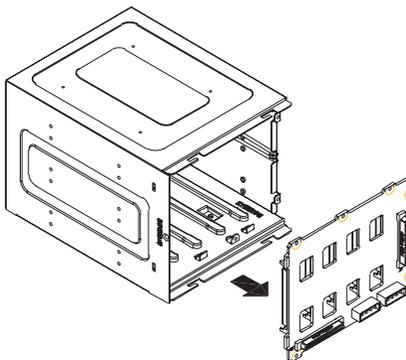

## Notes

Disclaimer (cont.)

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.